

Accurate Sensing Technologies We measure accurate temperature in extreme conditions

AST A250C+/A450C+ PL/TL BT

Non-contact Infrared Pyrometers

USER MANUAL



AST - Accurate Sensing Technologies

188A, B-169 (Part), B-188 (A), Road No. - 5, Mewar Industrial Area, Udaipur - 313003 (Rajasthan) INDIA Phone : +91-9352506032 Email : sales@astinfrared.com



<u>Index</u>

1.	Chapter - 1	1
2.	Chapter - 2 Introduction 2.1 Product Key Features, Application and Range 2.2 Technical specification 2.3 Optics	2
3.	Chapter - 3Basics & Installation of Pyrometer3.1Basics of Infrared temperature measurement of an object3.2Installation3.3Location Selection3.4Mechanical Accessories3.5Electrical Installation	6
4.	Chapter - 4Setting at the Instruments4.1Operation4.2Key Descriptions4.3Adjustable Parameters4.4Other Parameters	14
5.	Chapter - 5 Software installation 4.1 Installation 4.2 Parameters in main screen	18
6.	Chapter - 6Android Application Software5.15.2Communication5.3Operation5.4Datalogging & Online graph	25
8.	Chapter - 7 Maintenance	29
9.	Chapter - 8 Serial communication protocol	30
10	Appendix B	35
11	. Appendix C	37



Chapter - 1 General Information

Congratulations on choosing this high quality and highly efficient AST pyrometer for non contact temperature measurement.

Please read this user manual carefully, step by step, including all notes of security, operation and maintenance before installing the pyrometer. This manual contains all the necessary instructions for set up and operation of the pyrometer. This section provides an overview about important safety regulations.

Some Important Safety Regulations Given Below

1. Safety Precaution

Each person working with pyrometer must read the user manual before operation. The pyrometer has only to be used for the purpose described in manual. The pyrometer works only with a potential free low voltage of range 24VDC. This voltage is not harmful for user. The pyrometer may contain harmful material and hence it should not be disposed of with normal waste.

2. Packaging and Storage

Always use a shock proof package for shipment of pyrometer. It should be sealed to protect it against humidity. Also protect the lens of pyrometer with cover. They should be stored at the temperature range from -20°c to 70°c.

3. Limit of Liability and Warranty

All general information and notes for handling, maintenance and cleaning of this instrument are offered according to the best of our knowledge and experience.

AST reserves the right to revise this document and to make change from time to time in the content hereof without obligation to notify any person or persons of such revisions or changes

AST instruments have a warranty of two year from the invoice date. This warranty covers manufacturing defects and faults which arise during operation only if they are the results of defects caused by AST.

AST does not accept liability for any damages or losses which might occur, including consequential damages and financial losses, as a result of use of the instrument.

4. Copyright

All rights reserved . this document may contain proprietary information and shall be respected as a proprietary document to AST with permission for review and usage given only to the rightful owner of the instrument with which this document is associated.



Chapter - 2 Introduction

AST A250C+/A450C+ PL/TL BT is digital two color pyrometer which uses ratio of two adjacent wavelengths for temperature measurement of target object. They are specially designed highly accurate digital pyrometers to provide high performance and low maintenance of non contact temperature measurement in demanding industrial environment.

2.1 Product Key Features, Application and Range

The AST A250C+/A450C+ PL/TL BT pyrometers are especially designed for industrial purposes. They are suitable for high temperature measurement ranging from 250°C to 2500°C.

These pyrometers have solid body in stainless steel housing, which provides high operation safety even in rough industrial environment, and large variety of focusable optics which can be easily used in all industrial areas.

These pyrometers have OLED display which shows temperature and provides menu selection via parameterizaion keys. AST A250C+/A450C+ PL/TL BT both are having a fast response time of 2msec. The Pyrometer provided with bluetooth for communication between pyrometer & Android mobile, RS-485 for long distance communication between pyrometer & PC software Infrasoft. Response time, emissivity, sub-range and peak picker selection can be preset ex-works or adjustable through available software.

The AST A250C+/A450C+ PL/TL BT pyrometers are suitable for industrial purpose due to following advantages:

- Measurement of temperature is not affected by emissivity of object.
- Measurement of object temperature is possible where dust, moisture & other contaminants are present in surrounding environment.
- The measuring object can be smaller than spot size.
- The pyrometer can be switched between 1-colour & 2-colour mode.

Temperature measurement can be taken in any of the following modes:

- 1. Single colour mode.
- 2. Two colour mode.

Single Colour Mode: Single colour mode is best for measuring the temperature of target object in areas where no sighting obstacle is present between the target object and the pyrometer. Sighting obstacle can be any solid item, gaseous particles, smoke and dust etc. This mode is very useful where target object completely fills the spot size.

Two colour Mode: The basic concept of two colour mode is temperature measurement of the target object is done by the ratio of two separate and overlapping of infrared bands. Two sensors are used in this type of pyrometer.

2.2 Operational Theory for 2-colour sensors

Accurate and repeatable temperature measurement is possible with the two colour ratio technology that does not depend on emissivity of object. Basically a 2 colour sensor determines temperature from the ratio of radiated energies in two separate wavelength bands (2 different colours).

Advantages of two colour pyrometer over single colour pyrometer which makes it suitable for industrial usage are as follows:

- Measurement of temperature is not affected by emissivity of object.
- Measurement of object temperature is possible where dust, moisture and other contaminants are present in surrounding environment.
- The measuring object can be smaller than the spot size.
- The pyrometer can be switched between 1-colour and 2-colour mode.
- The spot is partially blocked or obscured.



2.2.1 Measurement of temperature is not affected by low or changing emissivity values

If the value of emissivity in both colours (wavelengths) are same as like for the black body (where emissivity =1.0) or for grey body where emissivity is less than 1.0 but a constant number and the emissivity of the target would not get influenced. But actually grey body does not exist in nature. The emissivity of all real objects changes with temperature and wavelength at variable degrees, depending on the material. 2 colour pyrometer is more accurate than single colour pyrometer when emissivity is uncertain or changing but emissivity should change by same factor in both wavelength bands. Accuracy of result measurement is dependent on the type of material being measured and the application for which it is used.

2.2.2 The measuring object is smaller than spot size

If the target object is moving or it is smaller than the spot size, the amount of radiated energy is also reduced. But the ratio of energies is unaffected and hence the measured temperature remains accurate.

2.2.3 The spot is partially blocked or obscured

The energy emitted from a target is usually reduced when target object is being blocked or some portion of the optical head is blocked. But the ratio of the energies is not affected and hence the measured temperature remains extremely accurate.

2 colour pyrometer is better than 1 or single colour in the following conditions:-

- When path of sight is partially blocked.
- When any of the sensors is subjected to dirt and/or moisture, smoke accumulating on the lens surface.
- When dirt, smoke & moisture is present in the atmosphere between the sensor and target.

The pyrometer temperature measurement method utilizes the fact that objects emit thermal radiation in an amount that directly corresponds to their own temperature and surface emissivity. Two color pyrometer involves measuring thermal radiance at two different wavelengths and inferring the temperature from the ratio of these spectral radiances. Radiance ratio thermometers can be significantly more accurate than single band thermometers in many applications.

The pyrometer sensor detects the amount of infrared radiation emitted by the measured object (target). The infrared signal is analyzed and the temperature it represents is analyzed by built-in microprocessor.

The applications in which AST pyrometers can be used are

✓ Preheating

- ✓ Annealing
- ✓ Tempering
- ✓ Welding
- ✓ Forging
- ✓ Hardening

- ✓ Melting
- ✓ Sintering
- ✓ Soldering
- ✓ Rolling
- ✓ Brazing
- ✓ Normalizing

Standard Item supplied with AST A250C+/A450C+ PL/TL BT

- ✓ AST pyrometer
- ✓ Connection cable 12-core (length 5 m)
- ✓ AST software CD

- ✓ Manual
- $\checkmark \ \ Certificate of calibration$



2.2 Technical Specifications

Model	A250C+ PL/TL BT	A450C+ PL/TL BT
Temperature Range (Analog sub-range adjustable)	250°C1800°C 300°C2500°C	600°C2500°C
Spectral Range	1.6 µm	1.0 µm
Photodetector Type	InGaAs	Si
Distance to Spot Size Ratio	75:1 (250°C1800°C) 150:1 (300°C2500°C)	300:1 (600°C2500°C)
Emissivity (ε)	0.11.0 adjustable	
Response Time	2 msec adjustable upto 10 sec	
Accuracy	\pm 0.3% of the measured value + 1°C	
Repeatability	0.1% of reading in °C + 1°C	
Sighting Options	Laser Pilot Light (PL) / Through The Lens (TL)	
Analog Output	0-20mA, 4-20mA (User selectable)	
Digital Output	Bluetooth RS-485 (Isolated) *At a time only one digital output possible	
Relay Output	Relay output with hysteresis 60V DC / 42V AC R	MS, 0.4A
Operating Temp. Range	0°C70°C 0°C200°C (With water cooling jacket)	
Storage Temp. Range	-20°C70°C	
Adjustable Parameters and Features via Software/ Keypad	Emissivity, Response Time, Clear Time(Peak Pic Unit Of Temperature(°C/°F), Record feature, Mai	
Power Supply	12V to 28V DC with reverse voltage protection	
Power Consumption	Max 2.5 watt	
Laser Power	<1 m watt (Only PL Model)	
Protection Class	IP65	
Housing	Stainless Steel	
Isolation	Power supply, Digital output and Analog output a	re galvanically islolated against each other
Operating Humidity	10-95%, Non-Condensing Conditions	
Weight & Dimensions	1200g Dia= Ø56 mm; Length=185.5mm	

Dimensions

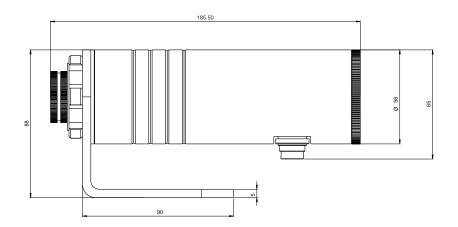


Fig. 1 Dimensions of Pyrometers



2.3 Optics

The pyrometer measure temperature by receiving heat radiation from the object whose temperature has to be measured. This heat radiation is passed through the lens sensor and then converted to an electrical signal. The farther the measured object from the pyrometer, the larger the area that will be measured.

	Spot Sizes(mm)				
Focused working distances WD (mm)	Length L	A250C+ 250°C - 1800°C (75:1)	A250C+ 300°C - 2500°C 350°C - 3000°C (150:1)	Length L	A450C+ 600°C - 2500°C (300:1)
475	14.00	6.40	3.20	13.60	1.60
500	13.20	6.70	3.40	12.70	1.70
700	8.70	9.40	4.70	8.50	2.40
800	7.40	10.70	5.40	7.20	2.70
1000	5.70	13.40	6.70	5.50	3.40
1500	3.50	20.00	10.00	3.40	5.00
2000	2.40	26.70	13.40	2.30	6.70
3000	1.40	40.00	20.00	1.30	10.00
5000	0.50	66.70	33.40	0.50	16.70
9000	0	120.00	60.00	0	30.00

Table 1:Some fixed optics focus is as below

Adjusting the required measuring distance:-

To achieve the spot sizes mention in the table above required measuring distance must be adjusted. This can be done between the smallest and the biggest limit value. For releasing the optics has to be turned anti clock wise. Then it can be pushed or pulled to find the correct measuring distance. For fixing the optics has to be turned clock wise.



Adjusting the measuring distance with the help of the table:-

The table mentions the minimum and maximum measuring distance for each optics as well as serval other values. The length "L" can we measured with a caliper. This length "L" can reach max. upto 14 mm.

Adjusting the measuring distance with help of the thru lens view finder:-

The focusable optics is correctly adjusted to the required distance, if the measuring object is shown as a sharp image in the view finder. A circle marks the position of the measuring spot.

Adjusting the measuring distance with help of the laser targeting light:-

On the focused measuring distance the laser has a smallest spot size.



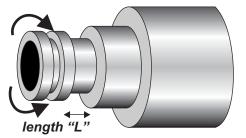


Fig. 2 Adjusting Measuring Distance



Chapter - 3 Basics & Installation of the Pyrometer

3.1 Basics of Infrared temperature measurement of an object

Each and every object emit definite amount of infrared radiation and its intensity varies according to the temperature of object. Wavelength of infrared radiation lies approximately between 0.7 to 1000 μ m depending on the material and properties of object. Infrared radiations are sometimes also referred to as "heat radiations" depends mostly on the material. This material dependent constant value is known as "emissivity", have a look at appendix B for emissivity values.

3.1.1 Emissivity (E)

Emissivity is the ratio of energy radiated from an object to the exterior and energy radiated from blackbody. The emissivity varies with the surface condition of the object and also with temperature variation and wavelength. If this value is not accurate, then the true temperature cannot be measured. In other words a variation or change in emissivity will cause a change in the measurement.

If the value of emissivity low, your measured results may contain some errors due to interfering infrared radiations form objects which are behind the target object like heating systems, fireclay brisk etc. Usually such type of problems occurs while measuring very thin materials like glass, plastic etc or some reflecting surface.

This error can be reduced if the sensor is shielded from reflecting radiation sources and also by properly, carefully installing the device.

By the application of Kirchhoff's law of thermal radiation "at thermal equilibrium, the emissivity of the body is equal to its absorptivity (α)". So for perfect black body, ε is 1 while any real object would have ε less than 1. Also the transmissivity (τ) and reflectivity (ρ) is zero. The sum of absorptivity, reflectivity and transmissivity is always 1.

$\alpha + \rho + \tau = 1$

By emissivity factor materials can be categorized as

- ✓ Metals
- ✓ Non metals
- ✓ Transparent materials

3.1.2 Calculation of emissivity of target object

There are various methods to do so but one of most prominently used is Calculate the actual temperature of target object using a RTD, Thermocouple etc. Measure the object's temperature by pyrometer and adjust emissivity settings in pyrometer unless correct temperature value is reached. Hence correct emissivity is measured of the target object.

3.2 Installation

3.2.1 Mechanical installation of pyrometer

After all preparations are completed you can install pyrometer. Installation of pyrometer depends on the type of bracket you are using and the type of surface.



3.2.2 Distance of pyrometer from object

The desired spot size on the target will determine the maximum measurement distance and the focal length of the optical module. To avoid wrong readings the spot size of target must contain entire field view of the pyrometer. The pyrometer must be mounted so the entire field of view is the same or smaller than the desired target size. This is indicated in the below diagram.

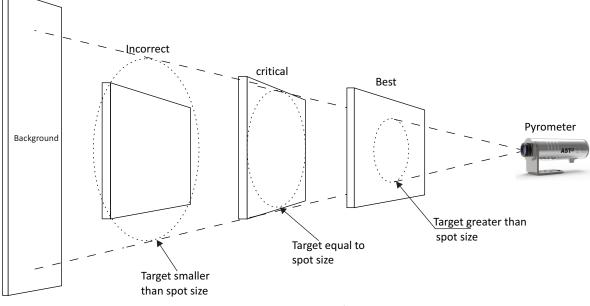


Fig.3 Proper mounting of pyrometer

3.2.3 Viewing Angles

The pyrometer can be placed at any angle from the target object up to 30°. indicated in the below diagram.

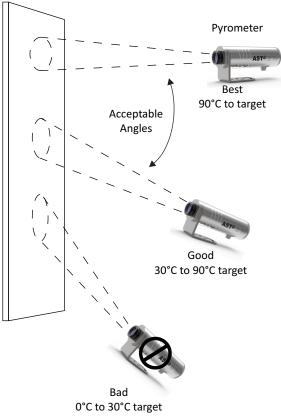


Fig. 4 Pyrometer Acceptable Viewing angles



3.3 Location selection

Qualified operating person should do the installation. Location should be good enough so that pyrometer should get continuous infrared radiation.

Pyrometer distance from object is according to below points:-

- 1. Pyrometer spot size should be small than object size.(read 3.2.2 & 3.2.3)
- 2. Know your pyrometer spot size according to point 2.3.
- 3. Pyrometer ambient temperature should be within 0° to 70°C (read 3.3.3).

3.3.1 Correct Positioning of the pyrometer

With pilot light (PL)

A laser targeting light will help to correct the position of the pyrometer. It is recommended that laser should be switched off while measurement. It will increase the life of laser. To avoid measuring errors caused by a too big spot size the pyrometer must be fixed in the correct measuring distance, so that the object under measurement fills the spot size.

With through the lens sighting (TL)

In case of through the lens sighting a reticule circle marks the position of the measuring spot. This circle is true-sided and parallax-free.

Note: The laser spot (PL) / reticule circle (TL) is only for indication of measuring spot, not exactly shows the measuring area.

3.3.2 Mounting of pyrometer

To install the pyrometer at the place of measurement a mounting support is supplied as an accessory, after losing the clamp screws, pyrometer can be mounted correctly in the mounting clamp.

3.3.3 Ambient temperature

The allowed operation temperature for the pyrometer is 0°C to 70°C. Therefore if pyrometer is to be used above 70°C upto 200°C water cooling jacket with built in air purge unit is used otherwise it may damage the pyrometer. The ambient temperature is dependent on the temperature and flow rate of cooling water. Details of water cooling jacket& air purge are given in point 3.4.1.

3.3.4 Atmospheric conditions

The pyrometer cannot receive the full infrared energy for the measurement if atmospheric conditions like smoke, dust or steam are present and hence it result in measuring error. An air purge unit can be helpful to avoid contamination such as dust and humidity on the lens. The air supplied should be at normal temperature with oil & moisture free. The air purge generates an air stream shaped like a cone and blows particles from the lens area.



3.4 Mechanical Accessories

3.4.1 Water Cooling Jacket

This accessory is very important in order to use pyrometer at higher temperature. A normal pyrometer can withstand a temperature of 0-70°C. For higher temperature applications the device must be used with water cooling jacket upto 200°C. (for mechanical drawing refer Appendix C.)

- Water pressure : <10 bar
- Air pressure : <0.5 bar
- Air consumption : 2...3 m³/h
- Ambient temperature : <200°C
- Metal
 Stainless steel
- Weight : 3.0 Kg

3.4.2 Air Purge

This accessory is used to keep dust, moisture, airborne particle and vapours away from the lens head so that correct sighting of target object can be done. (for mechanical drawing refer Appendix C.)

- Air pressure : < 0.5 bar
- Air consumption : 2...3 m³/h
- Metal
 : Aluminium
- Weight : 0.5 Kg
- Dry, clean air (Oil and dust free)

3.4.3 Adjustable mounting stand

This adjustable mounting stand will provide appropriate movement to the pyrometer. (for mechanical drawing refer Appendix C.)

- Metal
 Stainless Steel
- Weight : 0.9 Kg

3.4.4 Mounting Clamp

Mounting clamp can be used to hold the pyrometer.(for mechanical drawing refer Appendix C.) Fig. 8.

- Metal
 Stainless Steel
- Weight : 0.45 Kg

3.4.5 Mounting Flange

Fig. 5 Water Cooling Jacket (Reference no: 8500-09



Fig. 6 Air Purge Unit (Reference no: 8500-05)



Fig. 7 Adjustable Mounting Stand (Reference no: 8000-07)



Fig. 8 Mounting Clamp (Reference no: 8500-04)



Fig. 9 Mounting Flange (Reference no: 8500-07)



3.4.6 Mounting Plate



Fig. 10 Mounting Plate (Reference no: 8500-08)

3.5 Combination of Accessories





Fig. 11 Pyrometer with Mounting Clamp Reference No. (8500-04)

Fig. 12 Pyrometer with Mounting Flange (8500-07) + Air Purge (8500-05) + Water Cooling Jacket (8500-09)




Fig. 13 Pyrometer with Air Purge (8500-05) + Mounting Clamp (8500-09)



Fig. 14 Pyrometer with Mounting Flange (8500-07) + Air Purge (8500-05)



Fig. 15 Pyrometer with Mounting Clamp (8500-06) + Air Purge (8500-05) + Water Cooling Jacket (8500-09)

3.6 Electrical Installation

3.6.1 Power Supply

24V DC (well stabilized ripple max 50mV). The input power supply is 110/230v AC. Check the polarity before connecting the device.

Device has following specifications

Power supply I/P : 100 - 240VAC, 0.35A 50/60 Hz Power supply O/P : +24V DC, 0.625A



Fig. 16 12-Core Cable (Reference no: 7002-02)



Fig. 17 Power Supply Unit (Reference no: 9000-02)



3.6.2 Connector pin assignment on the bottom of the pyrometer

For connecting pyrometer with computer via connector pin (on the bottom of pyrometer) connection diagram is shown as under .Different colors and their indication is also shown in the table 2. So connections need to be done according to color, indication, used for particular purpose as in the table 2.

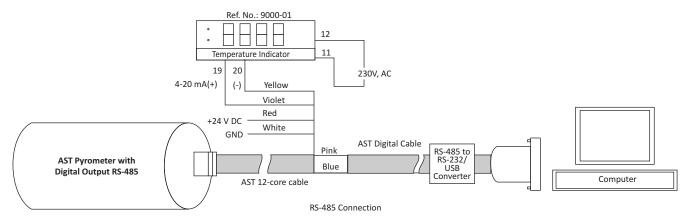


Fig. 18 Connecting pyrometer (RS-485 Converted) with computer

Pin	Colour	Indication	Used for
А	Red	24 V DC	Dowor cupply
G	White	Ground	Power supply
С	Blue	D- (RS-485)	
D	Pink	D+ (RS-485)	RS-485 communication
F	Black	RL1 NC	Dolou/Terminal
В	Grey	RL1-No	Relay Terminal
Н	Yellow	(-) 4-20mA / 0-20mA	
М	Violet	(+) 4-20mA / 0-20mA	Analog current output
J	Brown	Laser 2	
К	Green	Laser 1	Laser ON/OFF
E	Blue-Yellow	External Emissivity -mA	For External emissivity setting
L	Red-Grey	External Emissivity +mA	using 420mA

Table 2 : Color	code & Pin	specification for	pyrometer	connections
		Specification for	pyronicici	connections

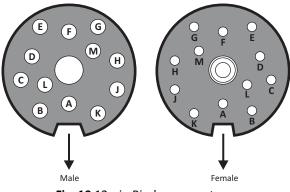


Fig. 19 12-pin Binder connector

Note : 1 Male - 12 pin binder connector is present on pyrometer side. 2. Female - 12 pin binder connector is present on 12 core cable side.



3.6.3 Power ON Pyrometer

- 1. Connect the 12-core cable with 12-pin connector of pyrometer.
- 2. Connect supply wire with (Red, White) of 12 core cable with 24V DC power supply.
- 3. Connect remaining wires as per your requirement (details given in table above).
- 4. Provide insulation for not used end points of 12-core cable.
- 5. Now, the pyrometer can be switch ON.


3.6.4 Converter RS-485 to RS-232




The pyrometer can communicate with PC usingr RS-485.

RS-485 is well suited for long distance transmission. Standard on PC is RS-232, so a converter is used which converts RS-485 to RS-232.

Fig. 21 Converter RS-485 to RS-232 (Reference no: 9000-03)

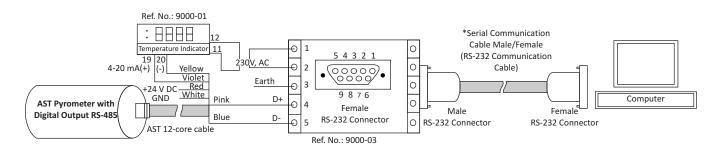




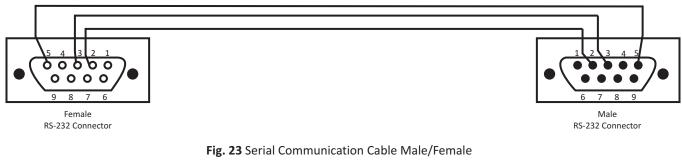

(RS-232 Communication Cable)



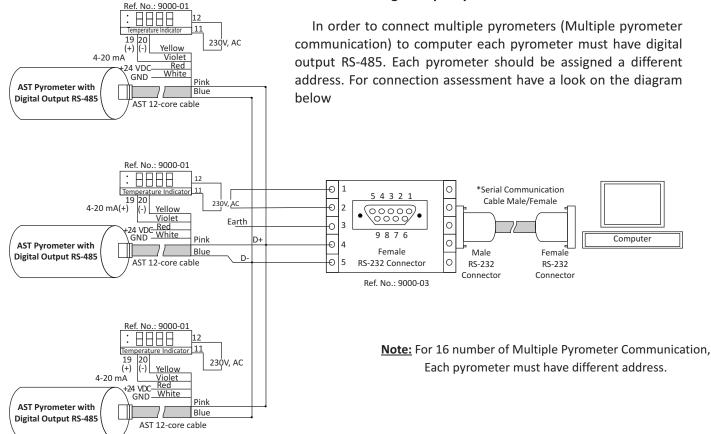

3.6.5 Connecting Multiple Pyrometers

Fig. 25 Temperature Indicator (Reference no: 9000-01)



Fig. 26 Display & Parameterizer P-120 (Reference no: 9001-01)

3.6.6 Display Instrument

Fig. 24 Multi-Pyrometer Connection

To display the measured temperature 7 segment digital indicator is used. Display temperature according to 4...20mA analog output. Device has following specifications:

Power supply I/P	:	100 to 240 V, AC/DC
Analog I/P	:	420 mA
Retransmission	:	420 mA
Power supply O/P	:	24V, DC
Display	:	4 Digits
Alarm	:	2

3.6.7 Display & Parameterizer

AST P-120 is a high precision LED indicator for non contact temperature measurement. With indication of measured temperature user can easily parameterize a connected AST digital pyrometer without any PC.

Device has following specification:

Power supply	:	100 – 240V, AC or 24V, DC
DC analog O/P	:	0-20 mA or 4-20 mA
Digital interface	:	RS-232 or RS-485
Pilot light	:	Pilot light On/Off with keys
Alarm with Hysteresis	:	2 Nos.



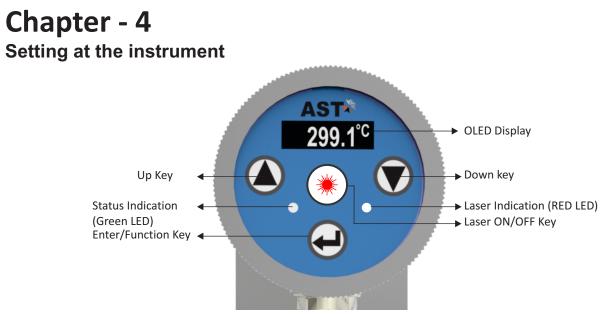


Fig. 27 For PL Model

User can power up the unit by using connection cable at 24V DC input. After power up sensor starts an initializing routine for some seconds. After this the object temperature is shown in the OLED display. **Note :** In TL model laser indication, Red LED and laser ON/OFF switch are not available

4.1 Operation

The programming keys FUNC, UP and DOWN enable the user to set the device on-site. Normally, OLED shows temperature or error. To view different parameter FUNC key is pressed repeatedly. To change values of parameters UP & DOWN keys are used. After changing values in any parameter by UP & DOWN key finally FUNC key should be pressed to save that value in device. If FUNC key is not pressed after changing parameter value than device will automatically take the old value & device will start showing temperature. If any key is not pressed for more than 5 sec. than device will automatically shows the temperature.

4.2 Key Description

Up Key: This key changes the options to the next available value in the upward order.

Down Key: This key changes the options to the next available value in the downward order.

Enter/Function Key : This key is used for various function selection.

Status Indication(GreenLED):under normal condition green LED glows continuously which indicates pyrometer is working correctly. If this LED blinks (getting ON & OFF) Indicates something is wrong which may be due to any of the following reasons

1. Target temperature is above the analog high range of pyrometer or target temperature is below the analog low range of pyrometer

2. Internal temperature is above ambient temperature high range of pyrometer(70°C) or internal temperature is below ambient temperature low range of pyrometer(0°C).

Laser Indication : When laser is ON (Red LED ON), Laser is OFF(Red LED OFF). User can operate laser by two methods:

Method 1.: By using green and brown wires

If Green and brown wires are short than red LED will glow which indicates laser is ON

If Green and brown wires are open than red LED will be OFF which indicates laser is OFF.

Method 2.: By using Laser ON/OFF key present on keypad.

User can also operate laser by using laser ON/OFF key but in this condition the green and brown wires should be open.



4.3 Adjustable Parameters

OLED Display	Parameters	Description
CM1	Single Color Mode	If user has selected CM1 by pressing func. key & up down key for selection between CM1 & CM2, then pyrometer will work in single color mode .
EMI	Emissivity	By pressing function key emissivity will be shown. It is the relationship between the emissions of a real object and the emission of a black body radiation source at the same temperature. For a correct measurement it is necessary to adjust emissivity. Emissivity depends on the surface condition of the material, the spectral range of the pyrometer and the measuring temperature. Different material has different emissivity ranging from 0.1 to 1.0.user can change emissivity by up/down key on the instrument.
CM2	Two Color Mode	If user has selected CM2 by pressing func. key and up down key for selection between CM1 & CM2, then pyrometer will work in two color mode .
ESR	Emissivity Slop	This parameter will be shown if two color mode(CM2) is selected, Different material has different Emissivity slope ranging from 0.75 to 1.25.
SP	Set Point	Instrument is equipped with a relay contact controlled by the measuring signal. The turn on temperature of relay is adjusted within the measuring range. The relay contact is "OPEN" below the adjusted value, it is "CLOSE" above it.
HST	Hysteresis (Hyst.)	 The relay contact close when temperature exceeds the set point. It opens only if the temperature falls below a value which consists of set point and the adjusted hysteresis. It can be adjusted from 2° to 20°C. <i>Example : if set point value is 900°C and Hysteresis set to 10. Then relay operation as below mentioned:</i> Relay contact OPEN below 910°C temperature. Relay contact CLOSE above 910°C temperature. Once relay contact CLOSED than relay contact is OPEN's when temperature falls below 890°C.
ALO	Ana. Sub range Lo	Analog sub-range is adjustable within the basic range, user can set lower analog sub-range here.
AHI	Ana. Sub range HI	User can set the analog sub-range higher value here. Minimum span between lower & higher value is 51°C
AO	Analog Output	User can select the output from 420mA or 020mA
UT	Temp. Unit	User can select °C or °F unit.
ADD	Sensor Address	For communicating with pyrometer via software users have to give a address. The address may be 1 to 255.
TAU	Response Time	The response time can be set from 2 msec to 10sec.
SOL	Switch of Level	The switch of level is the function that is used to avoid measurement errors caused by signals, which are too low. Although factory default is set to 15 %, the switch off limit can be adjusted between 2 and 50%.



OLED Display	Parameters	Description
PIC	Peak Picker	The peak picker can be switched ON & OFF by using up down key. If the peak picker is switched on, the highest last temperature value will always be displayed and stored. This feature is particularly useful when object temperature is not uniform across its dimension or the pyrometer is not constantly viewing an object to be measured. Peak Picker Functions : When Peak picker is ON, the peak picker menu is enabled for setting of the parameters like decay rate function, reset below temperature and peak picker delay.
DR	Decay Rate	Decay rate The Decay rate range is 0.00 to 166.66°C/sec. or 0.00 to 300°F/sec. depending upon °F/°C unit's selection. The slowest Decay rate is 0 degrees per sec. This feature helps to eliminate erratic measurements and allows the peaked value to decay down to lower process temperature values as they occur. Decay rate is set to retain peak measured temperature value and ignore momentary decreases in measured temperature.
		Time Time Without Decay Rate With Decay Rate
DT	Delay Time	This function set the delay time in sec. before peak picker function starts. The delay time is selectable in the range 0.02 to 10.00 sec. Zero (0) turns delay time OFF. This function is used to delay the start of peaking action for upto 10 sec. following the detection of leading edge of a new target.
		Delay Time (sec.)
RBT	Reset Below Temperature	The user can set RBT within the limit of pyrometer sub range. This function sets the temperature above which peak picker action starts. When the target temperature matches or is below the selected value, the sensor indicates temperature without picking action.
		Part Part Part Part Part Part Part Part
		Without RBT Time RBT with Decay Rate Time
IT	Internal Temperature	It shows the internal temperature of pyrometer.

Note : If any key is not pressed till 5sec. time duration the pyrometer will automatically comes out of match temperature function and start displaying target temperature.



4.4 Special Function (Match Temperature)

МТ	Match	This parameter is used to match the known target temperature value to be displayed by the pyrometer. After that below display will be shown.
	Temperature	
		Measured Temperature ← 350.0 °C
		Required Temperature MT:350
		Measured Temperature : This indicates target temperature.
		Required Temperature : User can change and set required temperature by
		UP/DOWN key press. Press Enter for confirmation. Now pyrometer measured temperature will automatically set to your required temperature.
		Meaning of Massages on OLED display :
		1. $\varepsilon > 1.0$: If calculated emissivity of required temperature is greater than 1.0 than emissivity will not change, save in pyrometer and also the measured
		temperature will not change.
		2. ε < 0.1 : If calculated emissivity of required temperature is less than 0.1 than emissivity will not change, save in pyrometer and also the measured
		temperature will not change.
		EMICO.1 MT:587
		Note 1 : For MATCH TEMPERATURE parameter Peak picker should be OFF (PIC) if suppose it is found ON than below shown massage will be displayed.
		NO WORK
		PICKER ON
		Note 2 : If any key is not pressed till 5sec. time duration the pyrometer will automatically comes out of match temperature function and start displaying target temperature.




Chapter - 5

Software Installation

AST infrasoft 1.0.1 provides facility to set all the parameters like response time, analog scale, emissivity, clear time, communication mode. This software provide all necessary information about pyrometer.

5.1 Installation

Install the pyrometer software using the installation guide file on CD ROM & restart your PC as per guidelines provided for installation. After installation of the software; Double click the application. It will open the screen of software.

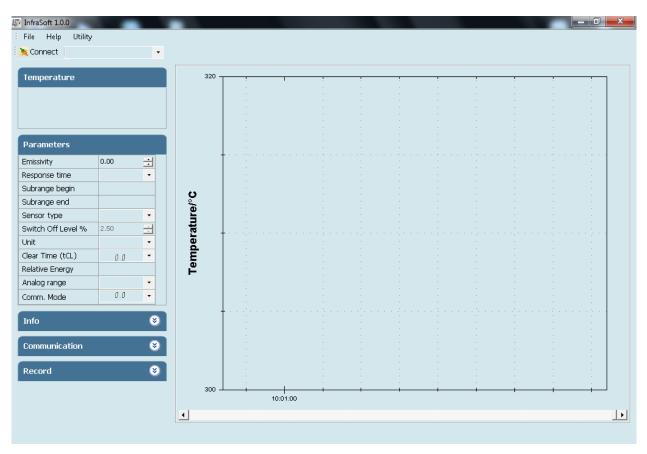

5.2 Parameters in main screen

5.2.1 Communication

Communication between the AST pyrometer and the software is implemented via a cable connected between the pyrometer and the PC serial port. This enables the acquisition and recording of data, as well as the transfer of commands from the software application to the AST pyrometer. Communication can be done by clicking on "Communication panel" and select correct COM Port address where pyrometer is connected. Also user has to select address of the pyrometer(Example: Default 01/ printed on the pyrometer sticker). Then click on CONNECT Button.

Communication		۲
Address	1	•
Com-Port	COM1	-
Device Name	COM1 COM2	
	COM3	
Record	COM4 COM5	2
	COM6	



For communication of multiple pyrometers, select different com port and address.


5.2.2 Temperature

It shows the temperature measured by the pyrometer



5.2.3 Parameter Setting

All user selectable device parameters can be set by using the software in the Panel "Parameter"

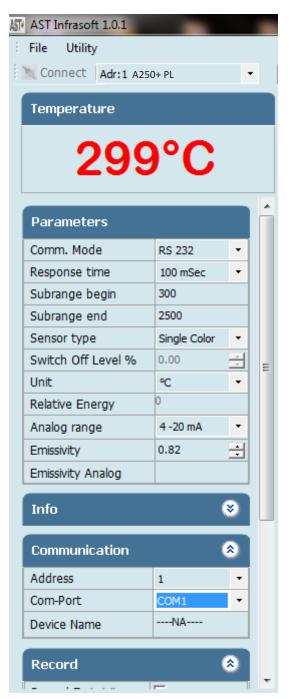

(A) Emissivity settings The emissivity can be set by clicking on "Parameters" and select or type in the desired emissivity directly in the description field. The emissivity value will be transferred to pyrometer by hitting the "TAB" button.

(B) Match This parameter is used to match the known target temperature value to be displayed by the pyrometer. The User can enter the required temperature in window provided. This value can be set by clicking on the "Match Temp." parameter in the software. The pyrometer automatically adjusts the emissivity so that the temperature display indicates the same temperature.

File Utility	Temperature Match Temp.
Temperature	NA
300°C	300.2

(C) Response time The desired response time can be chosen in the panel Parameter by clicking the appropriate list box (as per the values available in the drop box of response time). This parameter is use to set the analog response time of pyrometer.

(D) Sub Range User can change the sub range of pyrometer in the panel Parameter. Sub range must be within the basic range of pyrometer, the minimum span between higher & lower range is 51. Analog output will be automatically set according to the sub-range by hitting "TAB" button.

(E) Sensor Type It shows pyrometer sensor type. User can change sensor type from two color to single color and vice versa (only applicable with two color pyrometer).



(E)Switch off level% (for two color pyrometer) The switch of level is the function that is used to avoid measurement errors caused by signals, which are too low. Although factory default is set to 15 %, the switch off limit can be adjusted between 2 and 50%.

(F)Unit User can change the measuring unit of temperature from "Centigrade" to "Fahrenheit" and vice versa.


(G)Peak Picker If the peak picker is switched on, the highest last temperature value will always be displayed and stored. This feature is particularly useful when object temperature is not uniform across its dimension or the pyrometer is not constantly viewing an object to be measured.

Peak Picker Functions :


Peak picker can be turn ON & OFF by using the software. When Peak picker is ON, the peak picker menu is enabled for setting of the parameters like decay rate function, reset below temperature and peak picker delay.

AST Infrasoft 1.0.1				1
File Utility				
Connect Adr:1 A25	50 PL		•	·
Temperature				
300)°(С		
comm. Mode	R5 Z3	i2		
Response time	100 m	iSec	•	
Subrange begin	300			
Subrange end	2500			ſ
Sensor type	Single	Color	•	
Switch Off Level %	0.00			
Unit	°C		•	
Relative Energy	0			
Analog range	4 -20	mA	•	
Emissivity	1.00		÷	
Emissivity Analog				
Info		1	۲	:
Communication			8	
Record			۲	
Picker Settings			۵	
Pick Picker On/Off		On	•	
Decay Rate (Temp./S	Sec.)	5		
Delay Time (Sec.)		2		
Delay finne (Deely				

(I)Decay rate The Decay rate range is 0.00 to 166.66°C/sec. or 0.00 to 300°F/sec. depending upon °F/°C unit's selection. The slowest Decay rate is 0 degrees per sec. This feature helps to eliminate erratic measurements and allows the peaked value to decay down to lower process temperature values as they occur. Decay rate is set to retain peak measured temperature value and ignore momentary decreases in measured temperature.

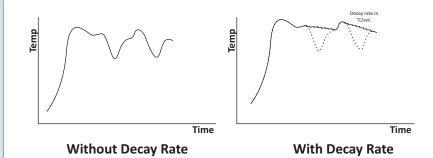


(II)Delay Time This function set the delay time in sec. before peak picker function starts. The delay time is selectable in the range 0.02 to 10.00 sec. Zero (0) turns delay time OFF. This function is used to delay the start of peaking action for upto 10 sec. following the detection of leading edge of a new target.

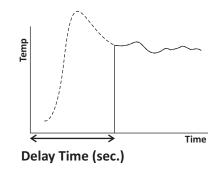



(III) Reset Below Temperature(RBT) The user can set RBT within the limit of pyrometer sub range. This function sets the temperature above which peak picker action starts. When the target temperature matches or is below the selected value, the sensor indicates temperature without picking action.

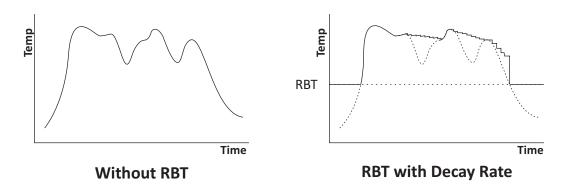

(H)Relative energy(for two color pyrometer) The relative energy shows a signal weakening which can be caused by contaminations of the optics or a viewing window or by dust in the field of view or a too small measuring object. Relative energy shows the measured intensity compared to the intensity, a black body radiation source would have at a determined ratio temperature of the pyrometer.

(I)Analog Range User can select the analog range from the option 4-20mA, 0-20 mA & 0-10V.

(J)Comm. Mode User can select the communication mode as per requirement [RS-232 / RS-485].

Note: For connection diagram from RS-232 to RS-485 & RS-485 to RS-232 Refer Page No:-9

To view parameters of multiple devices select the pyrometer name from the drop down list that appears at the top of the screen.

5.2.4 Device information

Pyrometer specific information will be displayed in the Info Panel

This screen shows the Model, basic range, serial number, version, Head temperature, internal temperature, working distance, spot size-apperture.

Info	۲
Model	AST A250 TL
Basic range	300°C1300°C
Serial number	849
FW Version	11.25
Head Temp.	0°C
Internal temp.	30°C
Working Dist. (mm)	300
Spot Size-Aprt. (mm)	2-5

5.2.5 Record

Record is for continuous data logging. It records the measured temperature, emissivity with current date & time. To start data logging click on start button. If user wants to record emissivity, click on record emissivity button. After Clicking Start button window appears where user can specify the file name & location.




Record will be saved as *.txt* format and the name of file will be user define.

	oduction\Desktop\14tl	15 11 2012						
	View Tools Macro	_						
		-						
🗅 🚄 🖫 🗐 🖨 🛛	à 🗉 X 🖻 🛍 1	요 오 🚛 🏹	i 🗁 🦷 🍪 🖔	🌮 🛃 🚱 👁 🖓	🔹 🗤 🕨 🚽 Find in	crementally 🖟 î 🗌] Match case 🖕	
14th 15-11-2013-2.txt >	<							-
No. of Device	1							
Date Time	Temperature	Emissi	vitv					
15/11/13	3:35:05 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	X					
15/11/13	3:35:06 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	X					
15/11/13	3:35:06 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	x					
15/11/13	3:35:06 PM	28°C	X					
15/11/13	3:35:07 PM	28°C	X					
15/11/13	3:35:07 PM	28°C	x					
15/11/13	3:35:07 PM	28°C	x					
15/11/13	3:35:07 PM	28°C	x					
15/11/13	3:35:07 PM	28°C	x					
15/11/13	3:35:07 PM	28°C	x					
15/11/13	3:35:07 PM	28°C	x					
15/11/13	3:35:07 PM	28°C	x					
15/11/13	3:35:07 PM	28°C	x					
15/11/13	3:35:07 PM	28°C	x					
		28°C	x					
15/11/13 15/11/13	3:35:07 PM 3:35:08 PM	28°C	x					
15/11/13	3:35:08 PM 3:35:08 PM	28°C	x					
		28°C 28°C	x					
15/11/13	3:35:08 PM	28°C 28°C						
15/11/13	3:35:08 PM		X					
15/11/13	3:35:08 PM	28°C	X					
15/11/13	3:35:08 PM	28°C	x					
15/11/13	3:35:08 PM	28°C	X					
15/11/13	3:35:08 PM	28°C	X					
15/11/13	3:35:08 PM	28°C	x					
15/11/13	3:35:08 PM	28°C	X					
<								Þ

To record emissivity, click on *Record Emissivity* button.

Record	۲
Record Emissivity	
🔘 Start	🖸 Stop

If user wants file in Spreadsheet format, user can export by choosing Excel Spreadsheet in file menu.

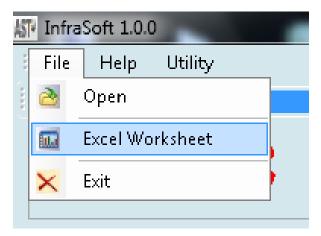




File will be stored in *.xls* format named as "export". This "export.xls" file will be saved where the software is installed.

9	Hom	ie 🛛 Insert	≂ Page Layout F	ormulas Dat	a Review		- Microsoft	Excel					- 0 ×
	aste 🛷	Microsoft Sar BIIU	• 🖽 • 🔕 • <u>A</u> •	EEE	¢ (* 🖬		% ,	• Co	inditional Fo rmatting = as T Style	able + Styles +	Galantian and a sector of the	· 💽 - ZI	ind &
CIII	A1	· · · · · · · · · · · · · · · · · · ·	Font DA		ient		Number	19	Style	:5	J Cells	Ealting	×
	A	В	c	D	E	F	G	Н	I	J	К	L M	N
1	DATE	ТІМЕ	TEMPERATURE	EMISSIVITY									
2	15/11/13	03:35:05 PM	28°C	Х									
3	15/11/13	03:35:06 PM	28°C	x									
4	15/11/13	03:35:06 PM	28°C	x									
5	15/11/13	03:35:06 PM	28°C	x									
6	15/11/13	03:35:06 PM	28°C	x									
7	15/11/13	03:35:06 PM	28°C	×									
8	15/11/13	03:35:06 PM	28°C	×									
9	15/11/13	03:35:06 PM	28°C	x									
10	15/11/13	03:35:06 PM	28°C	×									
11	15/11/13	03:35:06 PM	28°C	×									
12	15/11/13	03:35:06 PM	28°C	×									
13	15/11/13	03:35:06 PM	28°C	×									
14	15/11/13	03:35:06 PM	28°C	x									
15	15/11/13	03:35:07 PM	28°C	×									
н	< ► ► ta	able1 / Shee	t2 🖉 Sheet3 🏑 🞾						1 4				▶

To see previous record open the file by clicking on menu *File* **••** *open.*

Screen containing historical trend & historical data will appear.

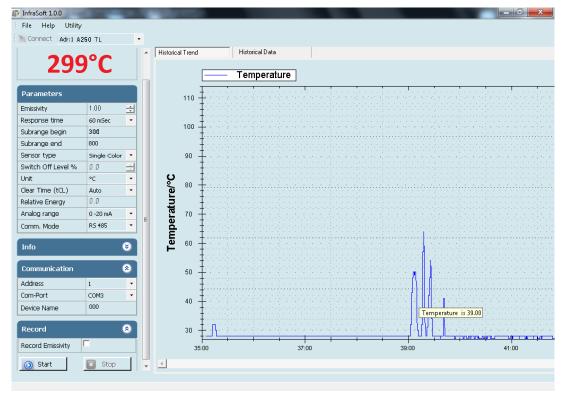






Temperature graph of connected pyrometer is displayed on right side of the screen. This shows the measured temperature corresponding to the time.

Note:

After connecting the pyrometer right click on the graph screen and choose "Set to default" option from pop-up menu.

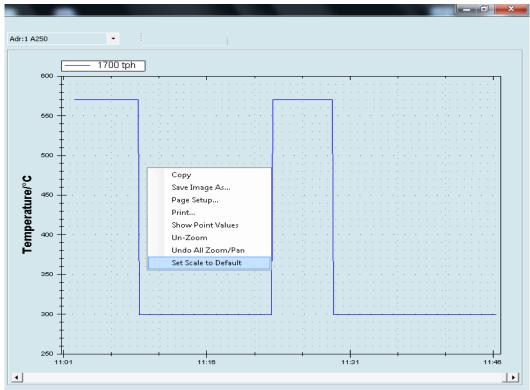



Chapter - 6 **Android Application Software**

6.1 Installation Process

AST provides "infrasmart.apk" for android phone. This apk is in software CD. Special Note: - This apk is compatible with android version 4.0 and above

Following are the predefined steps to install apk in a mobile.

- Copy apk file from CD in a mobile. (i)
- (ii) Click on "infrasmart.apk" (Fig. 6.1)
- (iii) Next screen will be as shown below, click on settings (Fig. 6.2)



ST Inf		lh. L	59% 🛑 2:28 Pi
ST Inf	raSmart		
		-	_
Instal	l blocked		
	curity reasons ently set to blo		
installa	ation of apps t	that v	were not
	ed from Play S e this, go to Se		
	and security,	-	
Unkno	wn sources.		
	CANCEL	\$	
			_
	(Fig. 6	.2)	

(IV) "On" unknown sources, Pop up window will appear as below. (Fig. 6.3)

Tick mark on "Allow this installation only "check box (indicated by arrow in below screen) and then click "OK". (Fig. 6.4)

(V) Next click on Install tab (Fig. 6.5)

a 👘 🐨 🖬 📶 📶 59% 🖬 2:28 PM	د الله الله الله الله الله الله الله الل	📼 🥂 👯 🖬 📶 📶 58% 🖬 2:28 PN
Lock screen and security	Lock screen and security	C1 + <i>t</i> = 0
Lock screen	Lock screen	S1 InfraSmart
Screen lock type	Screen lock type	Install this application? It will have access to:
Show information	Unknown sources S	
how the dual clock and owner information on the cck screen.	Sh Installing from unknown sources	Privacy
Notifications	 may be harmful to your device and personal data. By tapping OK, you agree that you are solely 	precise location (GPS and network- based)
ecure lock settings et your secure lock functions, such as Auto lock nd Lock instantly with Power key.	s responsible for any damage to your device or loss of data that may result from using these applications.	modify or delete the contents of your SD card read the contents of your SD card
ecurity	Se Allow this installation only	Device access
nd My Mobile cate and control your device remotely using your msung account.		access Bluetooth settings pair with Bluetooth devices
nknown sources low installation of applications from both	Unknown sources Allow installation of applications from both trusted and unknown sources	CANCEL INSTALL
(Fig. 6.3)	(Fig. 6.4)	(Fig. 6.5)



5.2 Communication

After installation, switch on Bluetooth of mobile. Scan for available devices. (Fig. 6.6) Select the device name from list for pairing. (Fig. 6.7)

For pairing user need to enter pin no. Pin no will be reverse of last four digit of device name.(For eg:- if device name is A2B-1627 then pin will be 7261). (Fig. 6.8)

	🕽 📶 - 58% 🛢 2:29 PM) 📶 .11 58% 🛢 2:29 PM
← Bluetooth	STOP	← Bluetooth	SCAN
On	0	On	•
Your device (Galaxy J2) is connearby devices.	urrently visible to	Your device (Galaxy J2) i nearby devices.	s currently visible to
Available devices		Available devices	
A2B-1627		A2B-1627 Pairing	
A2B-1614		A2B-1614	
(Fig . 6	.6)	(Fig	. 6.7)

Note: - Pairing require only one time until and unless it is not unpaired.


🕸 🛱 🕂 🚺 🚛 📶 58% 🛢 2:30 PM Bluetooth pairing request Enter PIN to pair with A2B-1627 (Try 0000 or 1234). Y n PIN $\hfill\square$ PIN containing letters or symbols CANCEL OK 1 2 3 ABC DEF 5 4 GHI JKL 6 MNO 7 8 9 wxyz PQRS TUV () X Done

(Fig. 6.8)

5.3 Operation

Open the Infrasmart application. Screen will appear as below, it will show all the devices which are paired. Select the device you need to connect. (Fig. 6.9)

Next screen will show all parameters of connected pyrometer. (Fig. 6.10)

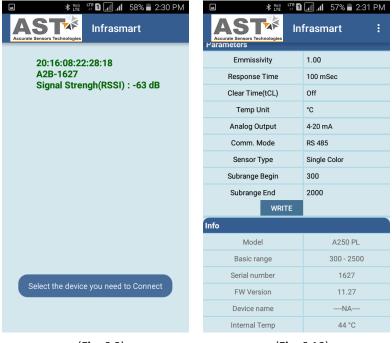

(Fig. 6.9)

(Fig. 6.10)

Note: - Don't click any where on screen until all data is loaded.

For parameter setting refer Page no 12 (4.2.3)



5.4 Data logging & Online graph

	1 📶 📶 57% 🖬 2:31 PM		1 🗐 📶 57%
Accurate Sensors Technologies	Infrasmart :	Accurate Sensors Technologies	Data Logging
arameters Emmissivity	1.00	Parameters Emmissivity	Graph
Response Time	100 mSec	Response Time	100 mSec
Clear Time(tCL)	Off	Clear Time(tCL)	Off
Temp Unit	°C	Temp Unit	°C
Analog Output	4-20 mA	Analog Output	4-20 mA
Comm. Mode	RS 485	Comm. Mode	RS 485
Sensor Type	Single Color	Sensor Type	Single Color
Subrange Begin	300	Subrange Begin	300
Subrange End	2000	Subrange End	2000
WRITE		WRITE	
fo		Info	
Model	A250 PL	Model	A250
Basic range	300 - 2500	Basic range	300 -
Serial number	1627	Serial number	16
FW Version	11.27	FW Version	11.
Device name	NA	Device name	N
Internal Temp	44 °C	Internal Temp	44

For data logging user need to click on dots which is at the right side as shown by arrow in below screen (Fig. 6.11) Next screen will be (Fig. 6.12)

(Fig. 6.11)



For data logging click on data logging & to view online graph user can click on Graph(Fig. 6.13 & 6.14)

	17 D 📶 📶 57% 🖬 2:3	
AS I AF Accurate Sensors Technologies	DataLogging	:
Time	Temp(°C)	
26/10/2016 14:32 26/10/2016 14:32		
26/10/2016 14:32 26/10/2016 14:32		
26/10/2016 14:32 26/10/2016 14:32		
26/10/2016 14:32 26/10/2016 14:32	:26 299	
26/10/2016 14:32	:31 299	
26/10/2016 14:32 26/10/2016 14:32		
26/10/2016 14:32 26/10/2016 14:32		
26/10/2016 14:32 26/10/2016 14:32	:46 299	
20/10/2010 14.32	.49 299	
(F	ig. 6.13)	





⁴⁶ ∄ath ath ₹ ≵ ∰ ઉ ⊡ 2:14 pm	ffailte ailte 🖬 👽 🛛 🗱 🕄 💷 2:17 pm
AST DataLogging	AST DataLogging :
Enter file name Enter log time START STOP Time Temp	Enter log time 2 START STOP Time Temp(°C) 21/11/2016 14:17:12 299 21/11/2016 14:17:12 299 21/11/2016 14:17:16 299 21/11/2016 14:17:18 299 21/11/2016 14:17:20 299 21/11/2016 14:17:21 299 21/11/2016 14:17:22 299 21/11/2016 14:17:22 299 21/11/2016 14:17:22 299
good I the Image: the second se	21/11/2016 14:17:27 304 21/11/2016 14:17:29 307 21/11/2016 14:17:31 303 21/11/2016 14:17:33 306 21/11/2016 14:17:35 303 21/11/2016 14:17:37 305 21/11/2016 14:17:39 306 21/11/2016 14:17:42 306 21/11/2016 14:17:42 306 21/11/2016 14:17:46 305 21/11/2016 14:17:46 305 21/11/2016 14:17:48 305 21/11/2016 14:17:48 305 21/11/2016 14:17:58 299 21/11/2016 14:17:55 299

To Start data logging, Enter file name & log time then click on start tab.

Note : If file name or log time is not enter within 5 sec then time out error will appear.

To save data logging click on save button.

Location where file is saved will be shown on data logging screen as shown (Fig. 6.15).

⁴⁶ ath ath ► ₹ ≵ () 4 2:18 pm	∯uli⊨uli: 🖬 🦿 🛛 🗱 🛈 🖅 2:18 pm	الله عنه الله عنه الله عنه الله عنه الله عنه الله الله عنه الله الله الله عنه الله عنه الله عنه الله عنه الله ع الله عنه الله عنه الل
Enter log time 2	Enter log time 2	AST Accurate Sensors Technologies
START STOP	START STOP	Time
Time Temp(°C) 21/11/2016 14:17:12 299 21/11/2016 14:17:14 299 21/11/2016 14:17:16 299 21/11/2016 14:17:16 299 21/11/2016 14:17:20 299 21/11/2016 14:17:21 299 21/11/2016 14:17:25 299 21/11/2016 14:17:25 299 21/11/2016 14:17:29 307 21/11/2016 14:17:33 306 21/11/2016 14:17:37 305 21/11/2016 14:17:33 306 21/11/2016 14:17:37 305 21/11/2016 14:17:37 305 21/11/2016 14:17:37 305 21/11/2016 14:17:37 305 21/11/2016 14:17:46 304	Time Temp(°C) 21/11/2016 14:17:12 299 21/11/2016 14:17:14 299 21/11/2016 14:17:16 299 21/11/2016 14:17:16 299 21/11/2016 14:17:20 299 21/11/2016 14:17:21 299 21/11/2016 14:17:22 299 21/11/2016 14:17:25 299 21/11/2016 14:17:29 307 21/11/2016 14:17:33 303 21/11/2016 14:17:35 303 21/11/2016 14:17:37 305 21/11/2016 14:17:37 305 21/11/2016 14:17:37 305 21/11/2016 14:17:37 305 21/11/2016 14:17:37 305 21/11/2016 14:17:36 304	26/10/2016 14:32:1 Delete File 26/10/2016 14:32:1 299 26/10/2016 14:32:17 299 26/10/2016 14:32:20 299 26/10/2016 14:32:23 299 26/10/2016 14:32:23 299 26/10/2016 14:32:26 299 26/10/2016 14:32:29 299 26/10/2016 14:32:31 299 26/10/2016 14:32:31 299 26/10/2016 14:32:37 299 26/10/2016 14:32:40 299 26/10/2016 14:32:43 299 26/10/2016 14:32:43 299
21/11/2016 14:17:46 305 21/11/2016 14:17:48 306 21/11/2016 14:17:50 299 21/11/2016 14:17:52 299 21/11/2016 14:17:55 299	21/11/2016 14:17:46 305 21/11/2016 14:17:48 306 21/11/2016 14:17:50 299 21/11/2016 14:17:52 299 21/11/2016 14:17:55 299 Location	26/10/201614:32:4629926/10/201614:32:4929926/10/201614:32:5229926/10/201614:32:55299

To load file user need to enter file name

(Fig. 6.15)

Basic Information Of Bluetooth

- Bluetooth Communication range is up to 5 meter in the line of site condition. Line of sight is a type of propagation that can transmit & receive data only where transmit & receive stations are in view of each other without any sort of an obstacle between them.
- Pyrometer works as a slave and mobile works as master.
- Pyrometer Bluetooth pair with multiple devices but can communicate with only single device at a time.



Chapter - 7

Maintenance

In case of any queries, questions regarding repair, solutions to problems, calibration and assistance you may contact our sales representatives. Most of problems can be solved telephonically.

8.1 Cleaning Lens

The lens should be kept clean all the time as it aims at center of target object. When cleaning lens care should be taken and it can be done as follows :

- Firstly blow off lightly loose particles with "canned air" which is used for cleaning computer equipment or a small bellows squeeze (used for cleaning lenses).
- Now brush out gently remaining particles with a soft hair brush, a soft lens tissue can also be used.
- At last clean remaining particles "dirt" using a cotton or soft lens tissue dampened in distilled water. Do not scratch the surface.

In case of finger prints or any other grease material uses any of the following removing elements:

- Kodak lens cleaner
- Ethanol
- Denatured alcohol

Gently wipe with a soft, clean cloth after application of any of the above elements and wipe until you are able to see colours on the surface, then allow to air dry.

Do not wipe the surface dry, as this may result in scratches on the surface.

Note: Do not use any cleaners containing ammonia or simple ammonia to wash or clean the optical lens of pyrometer as this may permanently damage the surface of lens.



Chapter - 8

Serial communication protocol-MT500

This protocol is developed to use in the half duplex addressable communication mode. Master device should periodically issue requests to each Slave device. The request contains an address of polling "Slave" device. Slave device reply only on the requests issued by Master. Each Slave has its own address to recognize the issued request. AST sensors always operate as Slave devices. Using RS485 serial communication option allows connecting more than one sensor to Master device. AST sensors always perform delay of 5 ms before sending an answer on Master request to meet RS485 hardware requirement.

MT500_AST protocol uses only RD (Batch Read) and WD (Batch Write) commands. Sending other MT500 protocol commands causes sensor to consider it as error condition and answer with unknown command reply. Symbols enclosed within apostrophes ('symbol') means ASCII representation of the symbols. String enclosed with quotation mark ("string") means ASCII representation of the string (ended by '\0'). Data format is: <u>8 data bit, 1 stop bit, No parity, baud-rate 19200.</u>

Description	Address	Items	Parameters	
Emissivity	'0400'	'01'	Object emissivity multiplied by 1000. Refer user manual for adjustable range.	
Emissivity slope	'0401'	'01'	Emissivity slope parameter multiplied by 1000. Refer user manual for adjustable range.	
Response time (τ)	'0105'	'01'	Parameter specifies analog and serial output response time. See Table 1.	
Upper basic range	'0100'	'01'	Upper measurement range limit in °K (read only)	
Lower basic range	'0101'	'01'	Lower measurement range limit in °K (read only)	
Analog output type	'0F01'	'01'	'0000': 4 to 20 mA (Default); '0001': 0 to 20 mA, '0002': 0 to 10 Volt; '0003': K type TC; '0004': J type TC	
Upper sub range	'0102'	'01'	Upper analog scale value in °K	
Lower sub range	'0103'	'01'	Lower analog scale value in °K	
Station number	'0200'	'01'	Adjustable between '0001' to '0255'	
Temperature unit	'0201'	'01'	Flag is used to instruct PC SW to show temperature	
			'0000': Centigrade (Default); '0001': Fahrenheit	
Switch off level	'0107'	'01'	Parameter multiplied by 10.	
			Adjusted between 0 and 100%, Default set to 15%.	
Sensor mode	'0204'	'01'	'0000' = Single color; '0001' = Two color	
			This parameter is useless for single color sensors.	
Internal temperature	'0006'	'01'	Temperature inside device case in °C (read only)	
Head temperature	'0007'	'01'	Temperature inside optical head m°C(only for E –series pyrometers) (read only)	
Clear time(tCL)	'0303'	'01'	Adjustable between 0 to 12, Default 0, 0=OFF, 1=Auto. 2-12 = 10msec to 25sec [refer to page-13(clear time)]	
Laser control	'0F00'	'01'	'0000': LASER OFF; '0001': LASER ON (Default)	
Communication type selection	'0F03'	'01'	'0000':RS-485;, '0001': RS-232 (Default)	
Set point	'1700'	'01'	Set point for relay actuation (only for E –series pyrometers)	
Hysteresis	'1800'	'01'	Hysteresis value relay actuation	
LCD back light control	'1801'	'01'	'0000': BL OFF; '0001': BL ON(Default) (Only for E-series pyrometers)	
Device name	'1D00'	'01'	10 Bytes "Hot end ", if less then 10 bytes pad with space at end.	
Working distance (mm)	'1D01'	'01'	10 Bytes "1000 ", if less then 10 bytes pad with space at end.	
Spot size-apperture (mm)	'1D02'	'01'	10 Bytes "1000-6000" if less then 10 bytes pad with space at end. '-' sign between spot size and apperture is compulsory	
Relative energy (read only)	'0002'	'01'	Relative energy multiply by 1000 for 2 color pyrometers only	



'0E00'	'01'	10 bytes "AST450C "', if less than 10 byte pad with space at end
'1300'	'01'	Firmware version number of device (read only)
'1400'	'01'	6 bytes in hex, if less than 6 bytes pad with '0' at start. Only numbers
		allowed.
'1301'	'01'	'0001': Single color; '0002' : Two color
		'0003': Thermopile; '0004' : Reserved
'0000'	'02'	Calculated object temperature in °K and status of sensor (As shown in
		Appendix A).
		First process status code then real temperature.
	'1300' '1400' '1301'	'1300' '01' '1400' '01' '1301' '01'

Batch Read (RD)command

Byte 1	Bytes 2,3	Bytes 4, 5	Bytes 6-9	Bytes 10, 11	Byte 12	Bytes 13, 14
1 Byte	2 Bytes	2 Bytes	4 Bytes	2 Bytes	1 Byte	2 Bytes
STX	Station ID	RD	Address	Items	ETX	Checksum

Byte 1: Always STX (0x02)

Bytes 2, 3: The Station Number of the device to read from (2 Hex digits)

Bytes 4, 5: The command to execute (RD)

Bytes 6-9: This is the starting address to read from. Must be 4 bytes long

Bytes 10, 11: This is the number of addresses (items) to read. Must be 2 bytes long

Byte 12: Always ETX (0x03)

Bytes 13, 14: The checksum is the lowest 8 bits of the sum of bytes 2 through 12

Example : Read two parameters starting from address 0000, from the station number 10 (0AH). This will read addresses 0000 and 0001.

Byte 1	Bytes 2, 3	Bytes 4, 5	Bytes 6-9	Bytes 10, 11	Byte 12	Byte 13, 14
STX	0A	RD	0000	02	ETX	2E
0x02	0x30, 0x41	0x52, 0x44	0x30,0x30,0x30,0x30	0x30, 0x32	0x03	0x32, 0x43,

Checksum is calculated as the lowest 8 bits of the sum of the Hex codes for bytes 2 to 12. **Example :** $70ARD \ 000002^{1} + 0x30 + 0x41 + 0x52 + 0x44 + 0x30 + 0x30 + 0x30 + 0x30 + 0x30 + 0x32 + 3(ETX) = 22C \rightarrow$ Checksum is 2C lower byte of the result.

Reply

The reply length is L = (N * 4) + 8, Where N = the number of requested Items.

If the command is successful, the reply length will be at least 12 bytes. It consists of the STX, followed by four bytes for each requested item, then the ETX and Checksum.

Byte	Bytes	Bytes	Bytes	Bytes	Byte	Byte
1	2, 3	4, 5	6-9	10-13	L-2	L-1, L
STX	Station	RD	Data 1	Data N	ETX	Checksum

Byte 1	Bytes 2, 3	Bytes 4, 5	Bytes 6-9	Bytes 10-13	Byte 14	Byte 15-16
STX	0A	RD	059D	0000	ETX	AC
0x02	0x30, 0x41	0x52, 0x44	0x30,0x35,0x39,0x44	0x30, 0x30, 0x30, 0x30	0x03	0x41, 0x43

Reply to above command if address '0000' contains value 1497 and address '0001' contains value 0000.

in the event of an error, the reply is

Byte 1	Byte 2, 3	Byte 4, 5	Byte 6
NAK	0A	'R', 'D'	01 (Error Code)
0x15	0x30, 0x41	0x52, 0x44	0x30, 0x31

Batch Write (WD) command

Byte	Bytes	Bytes	Bytes	Bytes	Bytes	Bytes	Byte	Byte
1	2, 3	4, 5	6-9	10, 11	12-15	(L-6) - (L-3)	L-2	L-1, L
STX	Station ID	WD	Address	No. of Items	Data 1	Data N	ETX	Checksum

Byte 1	Bytes 2, 3	Bytes 4, 5	Bytes 6-9	Bytes 10, 11	Bytes 12-15	Byte 16	Byte 17,18
STX	0A	WD	0400	01	03E8	ETX	74
0x02	0x30, 0x41	0x57, 0x44	0x30, 0x34, 0x30, 0x30	0x30, 0x31, 0x30, 0x30	0x30, 0x33, 0x45, 0x38	0x03	0x37, 0x34

Reply

If the command is successful, the reply is

Byte 1	Byte 2, 3	Byte 4, 5
АСК	0A	'W', 'D'
0x06	0x30, 0x41	0x57, 0x44

In the event of an error, the reply is

Byte 1	Byte 2, 3	Byte 4, 5	Byte 6
NAK	0A	'W', 'D'	01 (Error Code)
0x15	0x30, 0x41	0x57, 0x44	0x30, 0x31



Error Codes

Error Code	Description	Comments		
'1'	Invalid check sum	See how to calculate a check sum		
'2'	Unknown command	Protocol uses only RD (Batch Read) and WD (Batch Write) commands		
'3'	Data length error	Number of items in WD (Batch Write) command doesn't match number of data bytes		
'4'	ETX not found	ETX (0x03) not present in command		
'5'	Illegal Address	number of items in a request is set to 0; memory segment number in a request is out of 0-25; Wrong command value, No data at requested address;		
'6'	More items requested	More than 99 items were requested in command		
'7'	Unsuccessful write	It informs Master that it should repeat WD command		

Table 1

Tau (τ)	Analog Response Time, ms	Serial Response Time, ms	
1	2	20	
3	6	50	
5	10	100	
10	20	200	
30	60	300	
50	100	500	
100	200	1000	
300	600	2000	
500	1000	3000	
1000	2000	4000	
3000	6000	5000	
5000	10000	10000	



Appendix A

DATA	Comments
Status code	'0000' : No error
	'0001' : Signal is lower than sensor sensitivity
	'0002' : Out of range due to T brightness minimum
	'0003' : Too low energy
	'0004' : Signal is higher than sensor sensitivity
	'0006' : Sharp brightness jump
	'0007' : Non stable object measurement
	'0011' : Internal temperature warning
	'0013' : Thermopile ambient temperature too low
	'0014' : Thermopile ambient temperature too high
	'0015' : Pyrometer in testing mode
	'0016' : Pilot light ON
	'0017' : Measurement below lower basic range
	'0018' : Measurement exceeds upper basic range
	'0019' : Pyrometer in warm up period

Broadcast Message

WD (Batch Write) command with Station ID of 0 is considered as broadcast message. Sensors process this command regardless of their Station Number and do not issue replies.

It is useful when master issues a request to change the same parameters of more than one Slave devices.

For more information write us at, sales@astinfrared.com



Appendix B

Typical emissivity values for various materials available:

All the emissivity values shown in the table are only approximate, as it depends various parameters and it may affect the emissivity of a material. These parameters are as under:

- 1. Temperature
- 2. Thickness of material
- 3. Angle of measurement
- 4. Spectral range of measurement
- 5. Geometry
- 6. Surface quality (polished, rough, oxidized, sandblasted)
- 7. Transmission

Material	Emissivity*
Aluminum, polished	0.05
Aluminum, rough surface	0.07
Aluminum, strongly oxidized	0.25
Asbestos board	0.96
Asbestos fabric	0.78
Asbestos paper	0.94
Asbestos slate	0.96
Brass, dull, tarnished	0.22
Brass, polished	0.03
Brick, common	0.85
Brick, glazed, rough	0.85
Brick, refractory, rough	0.94
Bronze, porous, rough	0.55
Bronze, polished	0.10
Carbon, purified	0.80
Cast iron, rough casting	0.81
Cast iron, polished	0.21
Charcoal, powdered	0.96
Chromium, polished	0.10
Clay, fired	0.91
Concrete	0.54
Copper, polished,	0.01
Copper, commercial burnished	0.07
Copper, oxidized	0.65
Copper, oxidized to black	0.88
Electrical tape, black plastic	0.95
Enamel **	0.90
Formica	0.93
Frozen soil	0.93
Glass	0.92
Glass, frosted	0.96
Gold, polished	0.02
lce	0.97
Iron, hot rolled	0.77
Iron, oxidized	0.74
Iron, sheet galvanized, burnished	0.23
Iron, sheet, galvanized, oxidized	0.28
Iron, shiny, etched	0.16




Material	Emissivity*
Iron, wrought, polished	0.28
Lacquer, Bakelite	0.93
Lacquer, black, dull	0.97
Lacquer, black, shiny	0.87
Lacquer, white	0.87
Lampblack	0.96
Lead, gray	0.28
Lead, oxidized	0.63
Lead, red, powdered	0.93
Lead, shiny	0.08
Mercury, pure	0.10
Nickel, on cast iron	0.05
Nickel, pure polished	0.05
Paint, silver finish**	0.31
Paint, oil, average	0.94
Paper, black, shiny	0.90
Paper, black, dull	0.94
Paper, white	0.90
Platinum, pure, polished	0.08
Porcelain, glazed	0.92
Quartz	0.93
Rubber	0.93
Shellac, black, dull	0.91
Shellac, black, shiny	0.82
Snow	0.80
Steel, galvanized	0.28
Steel, oxidized strongly	0.88
Steel, rolled freshly	0.24
Steel, rough surface	0.96
Steel, rusty red	0.69
Steel, sheet, nickelplated	0.11
Steel, sheet, rolled	0.56
Tar paper	0.92
Tin, burnished	0.05
Tungsten	0.05
Water	0.98
Zinc, sheet	




Appendix C

Mechanical Drawings

1. Water Cooling Jacket

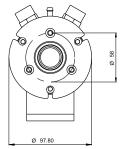


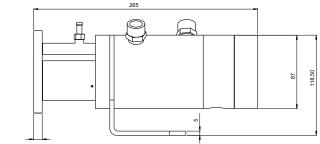

Water Cooling Jacket with Adjustable Flange PL (Reference no: 8000-02)


Water Cooling Jacket with Adjustable Flange TL (Reference no: 8000-06)

2. Air Purge Unit

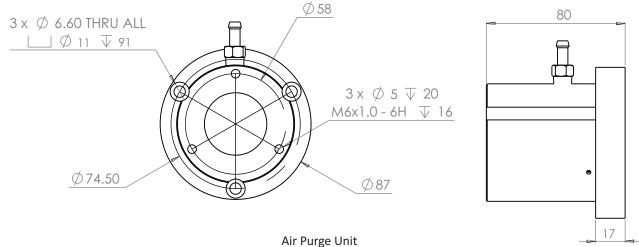

(Reference no: 8000-04)


3. Adjustable Mounting Stand

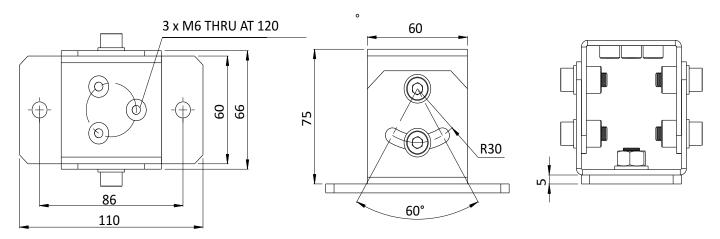

Adjustable Mounting Stand (Reference no: 8000-07)





3. Mounting Clamp (Pyrometer)

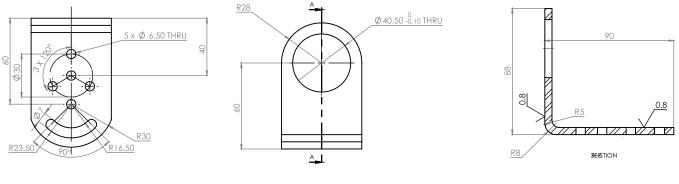




Mounting Clamp Water Cooling Jacket 4.

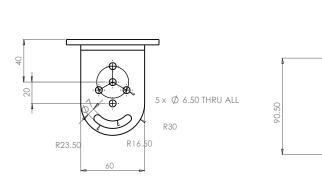

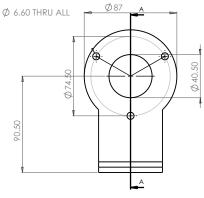

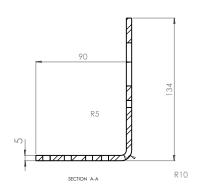

Mounting Clamp water cooling Jacket (Reference no: 8500-06)



Information

Maintenance

The pyrometer has no internal parts, which have to be cleaned. The lens can be cleaned with compressed air, which is dry and free of oil. If the protection glass requires more thorough cleaning, use a soft, dry cloth such as that used to clean camera lenses.

Packing instructions

To transport or store the instrument, please use the original box or a box padded with sufficient shock absorbing material. For storage in humid areas or shipment overseas, the device should be placed in welded foil (ideally along with silicone gel) to protect it from humidity.

Warranty

AST A250/A450 PL/TL instruments have a warranty of two years from the invoice date. This warranty covers manufacturing defects. User-induced faults are not covered under this warranty.

Software warranty

The windows compatible software was thoroughly tested on a wide range of windows operating systems. Nevertheless, there is always a possibility that windows or PC configuration or some other unforeseen condition exists that would cause the software not to run smoothly. The manufacturer assumes no responsibility or liability and will not guarantee the performance of the software. Liability regarding any direct or indirect damage caused by this software is excluded.

Limit of liability

AST not liable for any damages that arise from the use of any examples or processes mentioned in this manual.

Specifications are subject to change without notice



Copyright: © 2009, AST. All rights reserved.

This document may contain proprietary information and shall be respected as a proprietary document to AST with permission for review and usage given only to the rightful owner of the equipment with which this document is associated.

AST reserves the right to make changes, without further notice, to any products herein to improve reliability, function, or design. AST does not assume any liability arising out of the application or use of any product described herein, neither does it convey any license under its patent rights nor the rights of others.

Copyright: © 2009



Notes

110100		

ABOUT US

AST - Accurate Sensing Technologies

Accurate Sensing Technologies along with 3T - True Temperature Technologies established in 1994 focusing on the development and commercialization of non-contact temperature measurement technologies.

Based on these technologies, AST/3T has bought to the market a line of pyrometers for the remote measurement of target temperatures using no physical contact. AST/3T pyrometers use a totally new approach for remote temperature measurement achieving high accuracy.

The following products are available from AST/3T

- Single color pyrometer
- Ratio (2 color) pyrometer
- Fiber optics with single color and two color pyrometer
- Multi wavelength pyrometer specially for Aluminum & other Non ferrous application
- Black Body calibration sources
- Special system for automatic Isothermal Extrusion (MOMAS)
- Parameter setting Devices



Accurate Sensing Technologies





www.astinfrared.com

AST - Accurate Sensors Technologies

Misgav Industrial Park, Misgav 20174, Israel Ph. : +972-4-9990025, Fax. : +972-4-9990031 E-mail: info@accuratesensors.com

AST - Accurate Sensing Technologies

188A, B-169 (Part), B-188 (A), Road No. - 5, Mewar Industrial Area, Udaipur -313003 (Rajasthan) INDIA Phone : +91-9352506032 Email : sales@astinfrared.com