

(

Accurate Sensing Technologies

We measure accurate temperature in extreme conditions

AST AL30

Non-contact Infrared Pyrometers

USER MANUAL



AST - Accurate Sensing Technologies

188A, B-169 (Part), B-188 (A),

Road No. - 5, Mewar Industrial Area, Udaipur - 313003 (Rajasthan) INDIA

Phone: +91-9352506032

Email: sales@astinfrared.com



<u>Index</u>

1.	Chapter - 1 General information	1
2.	Chapter - 2 Introduction 2.1 Product Key Features, Application and Range 2.2 Technical specification 2.3 Optics	2
3.	Chapter - 3 Basics & Installation of Pyrometer 3.1 Basics of Infrared temperature measurement of an object 3.2 Installation 3.3 Location Selection 3.4 Mechanical Accessories 3.5 Electrical Installation	5
4.	Chapter - 4 Software installation 4.1 Installation 4.2 Parameters in main screen	13
5.	Chapter - 5 Calculate Spot size	20
6.	Chapter - 6	21
7.	Chapter - 7 Serial communication protocol	22
	Appendix A	26
	Appendix C	27 28
ΤÛ	. Appendix C	28



General Information

We are pleased that you have chosen this high quality and highly efficient AST pyrometer for non-contact temperature measurement.

Please read this manual carefully, step by step before performing any operation with the Pyrometer. It contains all the necessary instructions for set up and operation of the pyrometer. When operating the instrument, it is necessary to follow the general safety instructions.

1.1 Safety Measures

This section provides an overview about important safety regulations.

1.1.1 General

Each person working with the pyrometer must have read the user manual before operation. The Pyrometer has only to be used for the purpose described in the manual.

1.1.2 Safety Precaution

The Pyrometer works only with a potential-free low voltage of range 24V DC. This voltage is not harmful for the user.

1.1.3 Maintenance and use of Pyrometer

Pyrometer can be operated by the qualified person who has got instructions from the supervisor. It is strongly prohibited to do technical modifications of the device without permission of the manufacturer.

1.1.4 Environmental Protection

The lens or its coating may contain harmful materials and hence it should not be disposed of with normal waste.

1.1.5 Packaging and storage

Always use a shock-proof package for shipment of the pyrometer. It should be sealed to protect it against humidity. Also protect the lens of the pyrometer with a cover. They should be stored at the temperature ranges from -20° to $+70^{\circ}$ C.

1.1.6 Warranty

AST AL30 instruments have a warranty of two years from the invoice date. AST will replace defective parts, which arises from design errors or manufacturing faults. In case, if pyrometer is opened, disassembled or modified then the guarantees will loss.

AST does not accept liability for any damage or losses which might occur, including consequential damages and financial losses, as a result of use of the equipment.

1.1.7 Copyright ©

© All rights reserved. This document may contain proprietary information and shall be respected as a proprietary document to AST with permission for review and usage given only to the rightful owner of the equipment with which this document is associated.



Introduction

AST AL30 model provides the advantage of non - contact temperature measurement of non-metallic surfaces & also on painted, coated or anodized metals. This instrument is designed for easy integration into standard 4 wire system. This format combines the high accuracy of digital signal processing with the simple connection. The L 30 pyrometer is used for target temperature ranging from 0°C to 1000°C. The electronic assembly is protected by IP65 rugged stainless steel housing.

2.1 Product Key Features, Application and Range

The AST AL30 pyrometers are especially designed for industrial purposes. They are suitable for high temperature measurement ranging from 0°C to 1000°C.

These pyrometers have solid body in stainless steel housing which provides high operation safety even in rough industrial environment, and large variety of optics with fixed focus which can be easily used in all industrial areas.

AST AL30 has a fast response time of 60msec. Pyrometers have RS-232 or RS-485 outputs. Response time, emissivity, sub range and peak picker selection can be preset ex works or adjusted through available software.

The pyrometer temperature measurement method utilizes the fact that objects emit thermal radiation in an amount that directly corresponds to their own temperature and surface emissivity.

The pyrometer sensor detects the amount of infrared radiation emitted by the measured object (target). The infrared signal is analyzed and the temperature it represents is analyzed by built-in microprocessor. AST AL30 work in 4-wire technology.

The applications in which AST pyrometers can be used are:

- Plastic
- Fluids
- Rubber
- Ceramic
- Wood
- Glass
- Coated metals
- Textiles

Standard Item supplied with AST AL30:-

- 1. AST pyrometer
- 2. Connection cable 12-core (length 5 m)
- 3. Digital cable 3-core (length 1.5 m)
- 4. USB Cable
- 5. AST software CD
- 6. Manual
- 7. Certificate of calibration



2.2 Technical Specifications

Model	AST AL30
Temperature Range	0°C to 1000°C, 75°C to 1000°C
(Analog sub range adjustable)	(Analog output sub range adjustable)
Emissivity Range	0.1 1 adjustable
Spectral Range, μm	814 μm
Photodetector Type	Thermopile
Response Time	60msec
Accuracy	T = 0 to 200°C ±2% of reading in °C or 3 °C (Whichever value is greater), T = 201°C to 1000°C ±1.5% of reading in °C or 4°C (Whichever value is greater) (The instrument must be at a constant ambient temperature for a minimum of 30min)
Repeatability	0.5% of reading in °C +1°C
Distance to Spot size Ratio	50 : 1 (0 to 1000°C) 100 : 1 (75 to 1000°C)
Digital output	USB 2.0, RS-232/ RS-485 (Isolated) User Selectable.
Analog output	4-20 mA or 0-20 mA or 0-10 V User selectable
Power	12V to 28V DC with reverse voltage protection
Sighting	Laser pilot Light
Laser Power	<1m W
Protection class	IP65
Operating temperature range	0°C to 70°C, 0°C to 200°C (with cooling jacket)
Isolation	Power supply and digital output and analog output are galvanically isolated against each other.
Storage temperature	-20°to 70°C
Dimensions/Weight	Dia.= Ø49.5mm; Length= 118mm / Weight= 0.6 kg
Adjustable Parameters via software	Emissivity, Analog output, Address, Response time, Peak picker, Analog Output sub range

Note: - After power supply initialization, keep pyrometer under stable temperature condition for 25-30 minutes for to get above stated accuracy.

Laser should be used only for targeting purpose. In normal measuring laser should be turned off to get correct measurements.

Dimensions


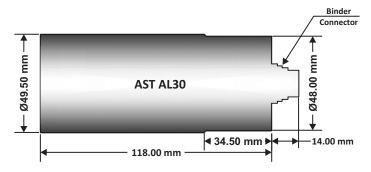


Fig. 1 Dimensions of Pyrometers




2.3 Optics

The pyrometer measure temperature by receiving heat radiation from the object whose temperature has to be measured. This heat radiation is passed through the lens sensor and converted to an electrical signal. The farther the measured object is from the pyrometer, the larger the area that will be measured by the pyrometer. Depending on customer need, the pyrometer is designed with fixed optics.

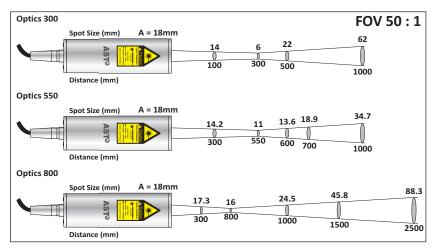


Some fixed optics focus is as below: -

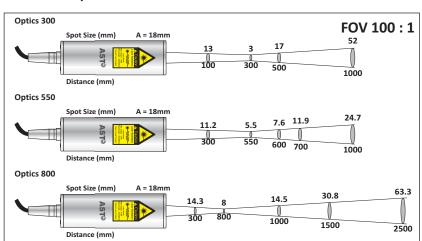

*Manufactured working distance (WD) mentioned on the pyrometer.

If the pyrometer is not installed at manufactured working distance (WD) then spot size at actual installed distance should be calculated. For example, if factory made working distance in 550mm (FOV 50:1, Optics 550), then spot size is 11mm (as given in figure). If user installed this pyrometer at 800mm, user have to calculate by the given method below.

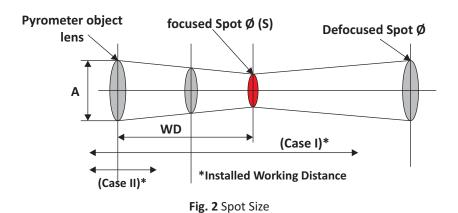

<u>Case-I:</u> If installed working distance is greater than manufactured working distance

Installed Spot Size =
$$\frac{\text{Installed working distance (Case I)}}{\text{WD}} \times (S + A) - A$$

<u>Case-II:</u> If installed working distance is smaller than manufactured working distance

Installed Spot Size =
$$\frac{\text{Installed working distance (Case II)}}{\text{WD}} \times (S - A) + A$$

Where: S= manufactured spot size of pyrometer(mm), A = It shows the value of lens opening (aperture in mm)



Basics & Installation of the Pyrometer

3.1 Basics of Infrared temperature measurement of an object

Each and every object emit definite amount of infrared radiation and its intensity varies according to the temperature of object. Wavelength of infrared radiation lies approximately between 0.7 to $1000~\mu m$ depending on the material and properties of object. Infrared radiations are sometimes also referred to as "heat radiations" depends mostly on the material. This material dependent constant value is known as "emissivity", have a look at appendix B for emissivity values.

3.1.1 Emissivity (E)

Emissivity is the ratio of energy radiated from an object to the exterior and energy radiated from blackbody. The emissivity varies with the surface condition of the object and also with temperature variation and wavelength. If this value is not accurate, then the true temperature cannot be measured. In other words a variation or change in emissivity will cause a change in the measurement.

If the value of emissivity low, your measured results may contain some errors—due to interfering infrared radiations form objects which are behind the target object like heating systems, fireclay brisk etc. Usually such type of problems occurs while measuring very thin materials like glass, plastic etc or some reflecting surface.

This error can be reduced if the sensor is shielded from reflecting radiation sources and also by properly, carefully installing the device.

By the application of Kirchhoff's law of thermal radiation "at thermal equilibrium, the emissivity of the body is equal to its absorptivity (α)". So for perfect black body, ε is 1 while any real object would have ε less than 1. Also the transmissivity (τ) and reflectivity (ρ) is zero. The sum of absorptivity, reflectivity and transmissivity is always 1.

$$\alpha + \rho + \tau = 1$$

By emissivity factor materials can be categorized as

- ✓ Metals
- ✓ Non metals
- ✓ Transparent materials

3.1.2 Calculation of emissivity of target object

There are various methods to do so but one of most prominently used is Calculate the actual temperature of target object using a RTD, Thermocouple etc. Measure the object's temperature; and adjust emissivity settings unless correct temperature value is reached. Hence correct emissivity is measured of the target object.

3.2 Installation

3.2.1 Mechanical installation of pyrometer

After all preparations are completed you can install pyrometer. Installation of pyrometer depends on the type of bracket you are using and the type of surface.



3.2.2 Distance of pyrometer from object

The desired spot size on the target will determine the maximum measurement distance and the focal length of the optical module. To avoid wrong readings the spot size of target must contain entire field view of the pyrometer. The pyrometer must be mounted so the entire field of view is the same or smaller than the desired target size. This is indicated in the below diagram.

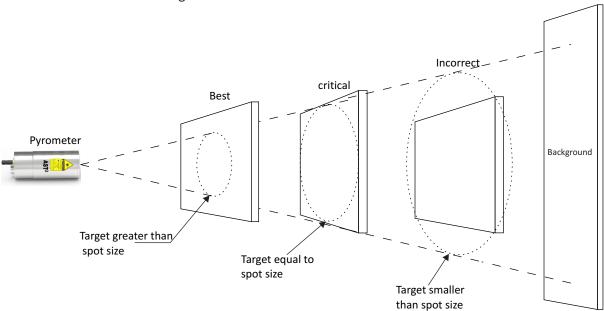


Fig.3 Proper mounting of pyrometer

3.2.3 Viewing Angles

The pyrometer can be placed at any angle from the target object up to 30°. indicated in the below diagram.

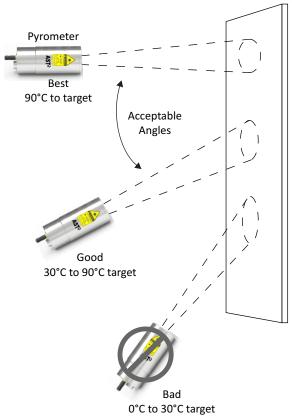


Fig. 4 Pyrometer Acceptable Viewing angles



3.3 Location selection

Qualified operating person should do the installation. Location should be good enough so that pyrometer should get continuous infrared radiation.

Pyrometer distance from object is according to below points:-

- 1. Pyrometer spot size should be small than object size. (read 3.2.2 & 3.2.3)
- 2. Know your pyrometer spot size according to point 2.3.
- 3. Pyrometer ambient temperature should be within 0° to 70°C (read 3.3.3).

3.3.1 Correct Positioning of the pyrometer

With pilot light (PL)

A laser targeting light will help to correct the position of the pyrometer. It is recommended that laser should be switched off while measurement. It will increase the life of laser. To avoid measuring errors caused by a too big spot size the pyrometer must be fixed in the correct measuring distance, so that the object under measurement fills the spot size.

Note: The laser spot (PL) is only for indication of measuring spot, not exactly shows the measuring area.

3.3.2 Mounting of pyrometer

To install the pyrometer at the place of measurement a mounting support is supplied as an accessory, after losing the clamp screws, it can be fastened correctly.

3.3.3 Ambient temperature

The allowed operation temperature for the pyrometer is 0°C to 70°C. Therefore if pyrometer is to be used above 70°C upto 200°C water cooling jacket with built in air purge unit is used otherwise it may damage the pyrometer. The ambient temperature is dependent on the temperature and flow rate of cooling water. Details of water cooling jacket & air purge are given in point 3.4.1.

3.3.4 Atmospheric conditions

The pyrometer cannot receive the full infrared energy for the measurement if atmospheric conditions like smoke, dust or steam are present and hence it result in measuring error. An air purge unit can be helpful to avoid contamination such as dust and humidity on the lens. The air supplied should be at normal temperature with oil & moisture free. The air purge generates an air stream shaped like a cone and blows particles from the lens area.



3.4 **Mechanical Accessories**

3.4.1 Water Cooling Jacket

This accessory is very important in order to use pyrometer at higher temperature. A normal pyrometer can withstand a temperature of 0-70°C. For higher temperature applications the device must be used with water cooling jacket upto 200°C. (for mechanical drawing refer Appendix C.)

< 10 bar Water pressure < 0.5 bar • Air pressure Air consumption $2...3 \, \text{m}^3/\text{h}$ • Ambient temperature : <200°C

Stainless steel Metal

Weight 2.75 Kg



Fig. 5 Water Cooling Jacket (air purge, mounting clamp, water jacket combo) (Reference no: 8000-02 (for PL) 8000-06 (for TL))

3.4.2 Air Purge

This accessory is used to keep dust, moisture, airborne particle and vapours away from the lens head so that correct sighting of target object can be done. (for mechanical drawing refer Appendix C.)

• Air pressure < 0.5 bar $2...3 \text{ m}^3/\text{h}$ • Air consumption Aluminium Metal Weight 0.15 Kg

• Dry, clean air (Oil and dust free)



Fig. 6 Air Purge Unit (Reference no: 8000-04)

3.4.3 Adjustable mounting stand

This adjustable mounting stand will provide appropriate movement to the pyrometer. (for mechanical drawing refer Appendix C.)

 Metal Stainless Steel

 Weight $0.9 \, \text{Kg}$



Fig. 7 Adjustable Mounting Stand (Reference no: 8000-07)

3.4.4 Mounting Clamp

Mounting clamp can be used to hold the pyrometer.(for mechanical drawing refer Appendix C.) Fig. 8.

 Metal Stainless Steel

0.45 Kg Weight



Fig. 8 Mounting Clamp (Reference no: 8000-05)



3.4.5 Combination of Accessoruies



Fig. 9 Adjustable Mounting Stand + L Clamp + Water cooling jacket with air purge (Reference no: 8000-02 or 8000-06 + 8000-07)

Fig. 10 Air purge unit + Mounting Clamp +
Pyrometer
(Reference no: 8000-04 + 8000-05)

3.5 Electrical Installation

3.5.1 Power Supply

24V DC (well stabilized ripple max 50mV). The input power supply is 110/230v AC check the polarity before connecting the device.

Device has following specifications

Power supply I/P : 100 - 240VAC, 0.35A

50/60 Hz

Power supply O/P: +24V DC, 0.625A



Fig. 11 12-Core Cable (Reference no: 7002-02)



Fig. 12 Power Supply Unit (Reference no: 9000-02)

3.5.2 Connector pin assignment on the back of the pyrometer

For connecting pyrometer with computer via connector pin (on the back of pyrometer) connection diagram is shown as under .Different colors and their indication is also shown in the table 2. So connections need to be done according to color, indication, used for particular purpose as in the table 2.

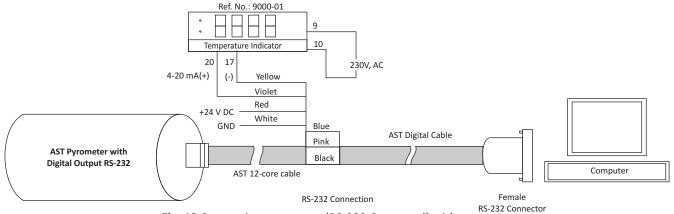


Fig. 13 Connecting pyrometer (RS-232 Converted) with computer



Table 2 : Color code & Pin specification for pyrometer connections

Pin	Colour	Indication	Used for
А	Red	+ 24 V DC In	Davies avents
G	White	Ground	Power supply
С	Blue	TxD (RS-232) / D- (RS-485)	
D	Pink	RxD (RS-232) / D+ (RS-485)	RS-232/ RS-485 communication
F	Black	RS-232 communication	
Н	Yellow	(-) 4-20mA / 0-20mA	A mala a a commanda a codo codo
М	Violet	(+) 4-20mA / 0-20mA	Analog current output
J	Brown	Short / Open both wires for laser	Lacar ON/OFF
К	Green	ON/OFF	Laser ON/OFF
Н	Yellow	- (0-10V)	Allt
В	Grey	+ (0-10V)	Analog voltage output
E	Blue-Yellow	N/A	Notuced
L	Red-Grey	N/A	Not used

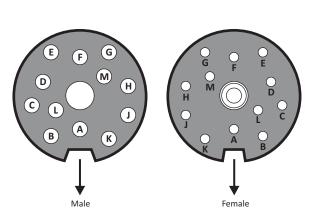


Fig. 14 12-pin Binder connector

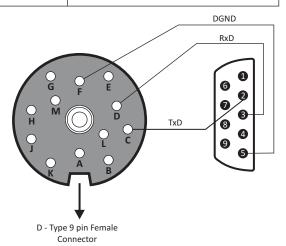


Fig. 15 RS-232 communication connection

3.5.3 USB 2.0 Connection

USB 2.0 is provided for Parameter Setting and Data Logging. 2Mtr long USB cable is supplied with pyrometer. While USB 2.0 is connected RS-232 / RS-485 communication is not possible. LED light indicates USB 2.0 operation.



Note: Power supply +24 V DC required for USB communication.



3.5.4 Power ON Pyrometer

- 1. Connect the 12-core cable (Supplied with pyrometer) with pyrometer 12-pin binder connector given at the back side of pyrometer.
- 2. Connect the 12-core cable supply wire with +24V DC as given in table above.
- 3. Connect remaining wires as per your requirement (details given in table above).
- 4. Provide insulation for not used end points of 12-core cable.
- 5. Now, the pyrometer can be switch ON.

3.5.5 Converter RS-232 ← RS-485



The pyrometer can communicate with PC using RS-232 or RS-485. RS-232 is used only for short distances.

RS-485 is well suited for long distance transmission. Standard on PC is RS-232, so a converter is used which converts RS-485 to RS-232.

Fig. 16 Converter RS-232 ↔ RS-485 (Reference no: 9000-03)

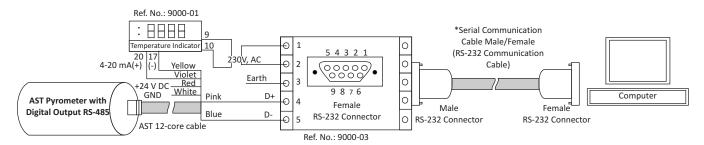


Fig. 17 RS-485 to RS-232 Connection


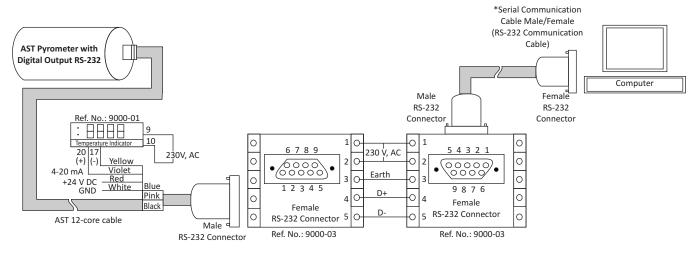


Fig. 18 RS-232 to RS-485 to RS-232 Connection



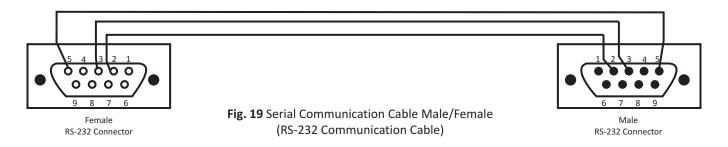

3.5.6 Connecting Multiple Pyrometers HHHH In order to connect multiple pyrometers (Multiple pyrometer 230V, AC communication) to computer each pyrometer must have digital Yellow output RS-485 converted. Each pyrometer should be assigned a 24 VDC different address. For connection assessment have a look on the AST Pyrometer with diagram below **Digital Output RS-485** AST 12-core cable Ref. No.: 9000-01 8888 Ф *Serial Communication 5 4 3 2 1 Cable Male/Female Ф 0 4-20 mA(+) (-) Yellow 00000 Violet Earth 0 3 0 24 VDC <u>Red</u> GND White Computer Pink Ф **AST Pyrometer with** 4 Blue Female Male Female **Digital Output RS-485** D-Ф AST 12-core cable RS-232 Connector 0 RS-232 RS-232 Connector Connector Ref. No.: 9000-03 : HHHH **Note:** For Multiple Pyrometer Communication, 230V, AC Each pyrometer must have different address. +24 VDC-\ GND-White **AST Pyrometer with** Blue Digital Output RS-485 AST 12-core cable



Fig. 21 Temperature Indicator (Reference no: 9000-01)



Fig. 22 Display & Parameterizer P-120 (Reference no: 9001-01)

3.5.7 Display Instrument

Fig. 20 Multi-Pyrometer Connection

To display the measured temperature 7 segment digital indicator is used. Device has following specifications:

Power supply I/P : 100 to 240 V, AC/DC

Analog I/P : 4....20 mA
Retransmission : 4....20 mA
Power supply O/P : 24V, DC
Display : 4 Digits
Alarm : 2

3.5.8 Display & Parameterizer

AST P-120 is a high precision LED indicator for non contact temperature measurement. With indication of measured temperature user can easily parameterize a connected AST digital pyrometer without any PC.

Device has following specification:

Power supply : 100 – 240V, AC or 24V, DC DC analog O/P : 0-20 mA or 4-20 mA Digital interface : RS-232 or RS-485

Pilot light : Pilot light On/Off with keys




Software Installation

The provided AST software "InfraSoft" offers digital PC interface RS-232 & RS-485. Using this software we can set all the parameters like response time, analog scale, emissivity, clear time, communication mode. This software provide all necessary information about pyrometer.

4.1 Installation


Install the pyrometer software using the installation guide file on CD ROM & restart your PC as per guidelines provided for installation. After installation of the software; Double click the application. It will open the screen of software.

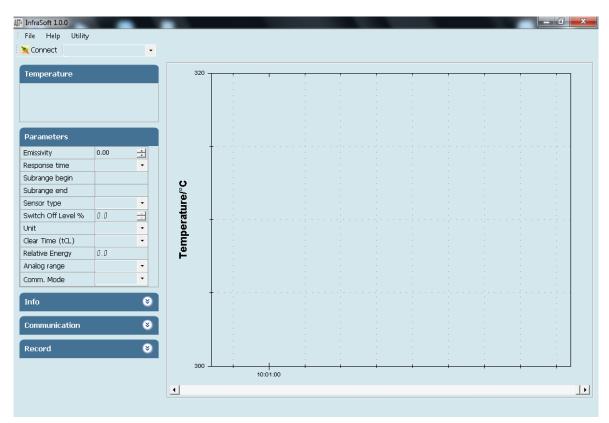

4.2 Parameters in main screen

4.2.1 Communication

Communication between the AST pyrometer and the software is implemented via a cable connected between the pyrometer and the PC serial port. This enables the acquisition and recording of data, as well as the transfer of commands from the software application to the AST pyrometer. Communication can be done by clicking on "Communication panel" and select correct COM Port address where pyrometer is connected. Also user has to select address of the pyrometer(Example: Default 01/printed on the pyrometer sticker). Then click on CONNECT Button.

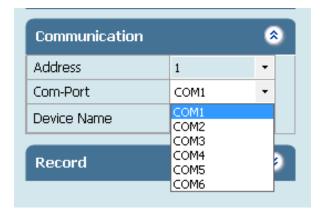



For communication of multiple pyrometers, select different comport and address.


4.2.2 Temperature

It shows the temperature measured by the pyrometer



4.2.3 Parameter Setting

All user selectable device parameters can be set by using the software in the Panel "Parameter"

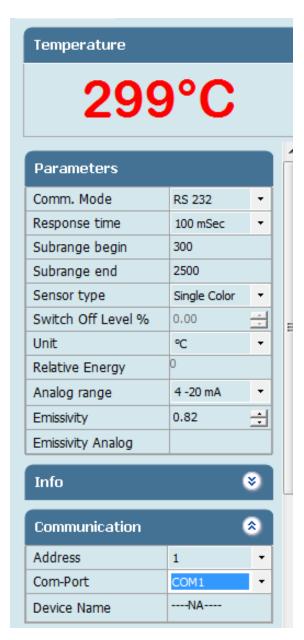

(A)Emissivity settings The emissivity can be set by clicking on "Parameters" and select or type in the desired emissivity directly in the description field. The emissivity value will be transferred to pyrometer by hitting the "TAB" button.

(B)Response time The desired response time can be chosen in the panel Parameter by clicking the appropriate list box (as per the values available in the drop box of response time). This parameter is use to set the analog response time of pyrometer.

(C)Sub Range User can change the sub range of pyrometer in the panel Parameter. Sub range must be within the basic range of pyrometer, the minimum span between higher & lower range is 51. Analog output will be automatically set according to the subrange by hitting "TAB" button.


(D)Sensor Type It shows pyrometer sensor type. User can change sensor type from two color to single color and vice versa (only applicable with two color pyrometer).

(E)Switch off level% (for two color pyrometer) The switch of level is the function that is used to avoid measurement errors caused by signals, which are too low. Although factory default is set to 15 %, the switch off limit can be adjusted between 2 and 50%.

(F)Unit User can change the measuring unit of temperature from "Centigrade" to "Fahrenheit" and vice versa.



- **(G) Peak Picker Setting** Three Pickers are available in Pickers setting menu (Auto, tCL, Smart) & user can switch on any as per requirement, one at a time.
 - **(G1) Auto** "Auto" mode is used for discontinuous measuring task, such as object being transported on a conveyer belt in such a case the maximum value for each object has to be indicated. when the object passes the measuring beam of the pyrometer, the maximum value is stored until a new hot object appears in the measuring beam. The temperature which has to

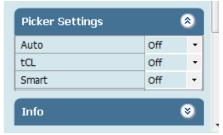

be recognized as "hot" is defined by the low limit of the adjusted sub range. The stored maximum value will be deleted when the temperature of the new hot object exceeds the low limit "from" of the sub range by at least

1°C. If a lower limit is not entered, the maximum value storage will be deleted whenever the low level of the full measuring has been exceeded.

(G2) Clear time (tCL) If the peak picker is switched on, the highest last temperature value will always be displayed and stored. As such, it may be beneficial to periodically clear and reset the stored values in order to obtain new temperature readings.


Example: If we set the tCl as "6 sec" the highest last temperature value will be display for 6.0 sec to 12 sec then it capture next pick.

The following setting are possible:

OFF: At clear time "OFF" the maximum value storage is switched off and only momentary values are measured.

tCL (10msec...25sec): Clear Time tCL can be set between 10msec and 25sec. When set, estimates the maximum values and holds it in two buffer memory. After the entered time, the storage will be deleted.

Clear Time feature is particularly useful when object temperature is not uniform across its dimension or the pyrometer is not constantly viewing an object to be measured. The peak picker works on two buffer memory to find maximum value over a defined interval. With the first memory, the highest measured value is held and is deleted alternately in the time interval set (clear time). The other memory retains the maximum value throughout the next time interval. The disadvantages of fluctuations in the display with the clock frequency are thereby eliminated.

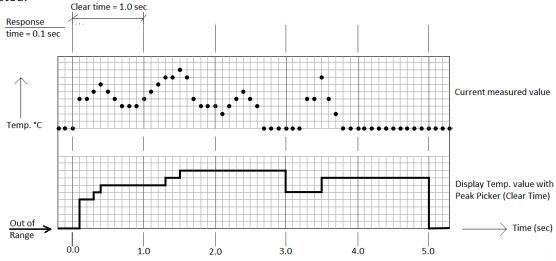

Note:

The maximum value storage coincides with adjustments made to response time. Therefore:


- (I) Clear time<= the adjusted response time is useless
- (ii) Clear times must be at least 5 times longer than the response time.
- (iii) Only maxima with full maximum value can be recorded, which appear at least 5 times longer than response time.




(G3) Smart If the smart picker is switched on, the highest last temperature value will always be displayed and stored. This feature is particularly useful when object temperature is not uniform across its dimension or the pyrometer is not constantly viewing an object to be measured.

Smart Picker Functions


Smart picker can be turn ON & OFF by using the software. When Peak picker is ON, the peak picker menu is enabled for setting of the parameters like decay rate function, reset below temperature and peak picker delay.

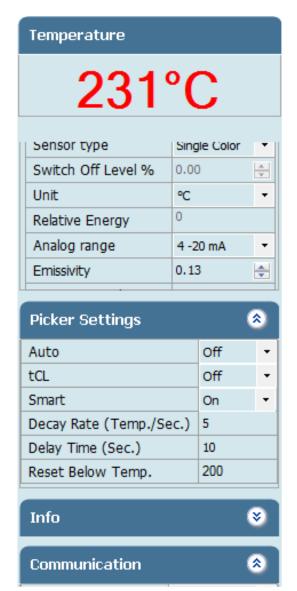


(I)Decay rate The Decay rate range is 0.00 to 166.66°C/sec. or 0.00 to 300°F/sec. depending upon °F/°C unit's selection. The slowest Decay rate is 0 degrees per sec. This feature helps to eliminate erratic measurements and allows the peaked value to decay down to lower process temperature values as they occur. Decay rate is set to retain peak measured temperature value and ignore momentary decreases in measured temperature.

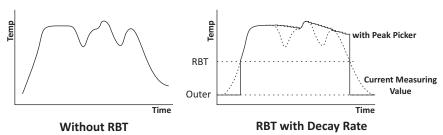


(II) Delay Time This function set the delay time in sec. before peak picker function starts. The delay time is selectable in the range 0.02 to 10.00 sec. Zero (0) turns delay time OFF. This function is used to delay the start of peaking action for upto 10 sec. following the detection of leading edge of a new target.

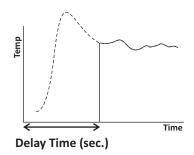

(III) Reset Below Temperature(RBT) The user can set RBT within the limit of pyrometer sub range. This function sets the temperature above which peak picker action starts. When the target temperature matches or is below the selected value, the sensor indicates temperature without picking action.

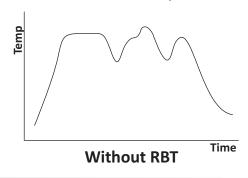

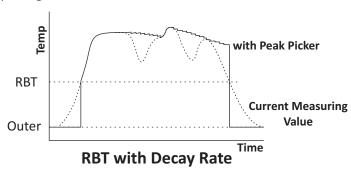



(H)Relative energy(for two color pyrometer) The relative energy shows a signal weakening which can be caused by contaminations of the optics or a viewing window or by dust in the field of view or a too small measuring object. Relative energy shows the measured intensity compared to the intensity, a black body radiation source would have at a determined ratio temperature of the pyrometer.

(I)Analog Range User can select the analog range from the option 4-20mA, 0-20 mA & 0-10V.

(J)Comm. Mode User can select the communication mode as per requirement [RS-232 / RS-485].

Note: For connection diagram from RS-232 to RS-485 & RS-485 to RS-232 Refer Page No:-9

To view parameters of multiple devices select the pyrometer name from the drop down list that appears at the top of the screen.

4.2.4 Device information

Pyrometer specific information will be displayed in the Info Panel


This screen shows the Model, basic range, serial number, version, Head temperature, internal temperature, working distance, spot size-apperture.



4.2.5 Record

Record is for continuous data logging. It records the measured temperature, emissivity with current date & time. To start data logging click on start button. If user wants to record emissivity, click on record emissivity button. After Clicking Start button window appears where user can specify the file name & location.


Record will be saved as *.txt* format and the name of file will be user define.

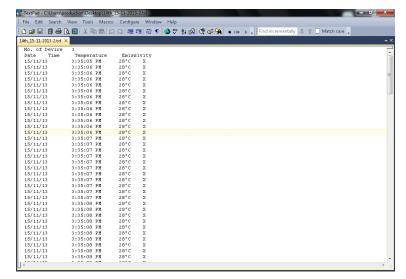

To record emissivity, click on *Record Emissivity* button.




If user wants file in Spreadsheet format, user can export by choosing Excel Spreadsheet in file menu.

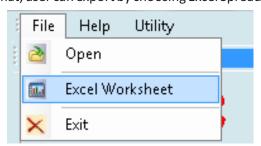





File will be stored in .xls format named as "export". This "export.xls" file will be saved where the software is installed.

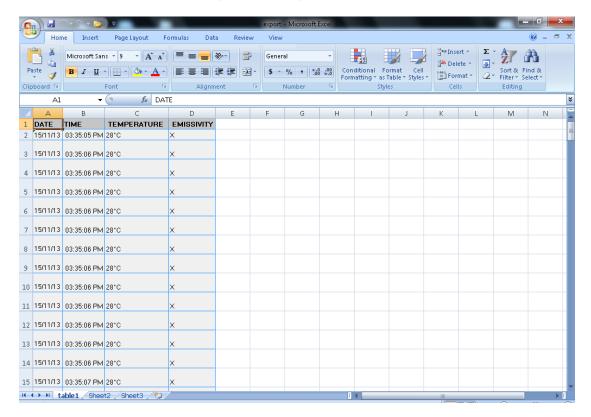

To see previous record open the file by clicking on menu *File* **> open.**Screen containing historical trend & historical data will appear.

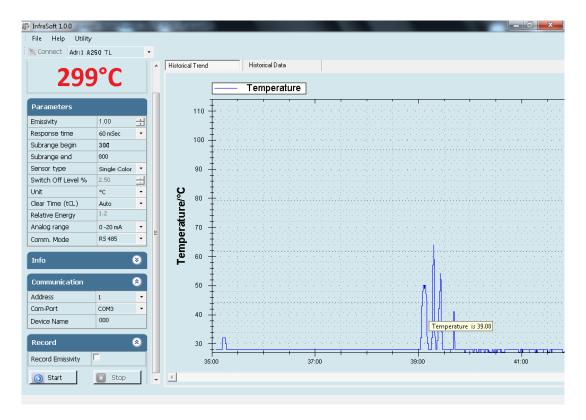




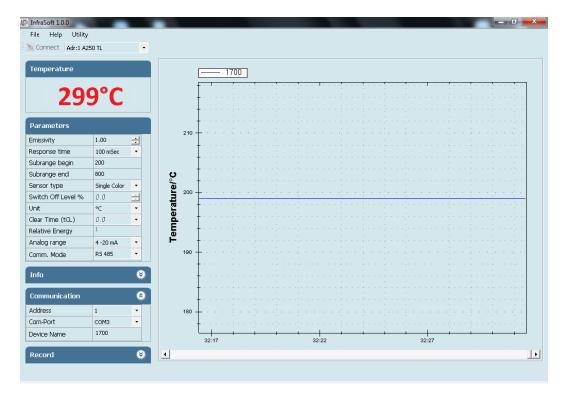

Temperature graph of connected pyrometer is displayed on right side of the screen. This shows the measured temperature corresponding to the time.

Note:

After connecting the pyrometer right click on the graph screen and choose "Set to default" option from pop-up menu.

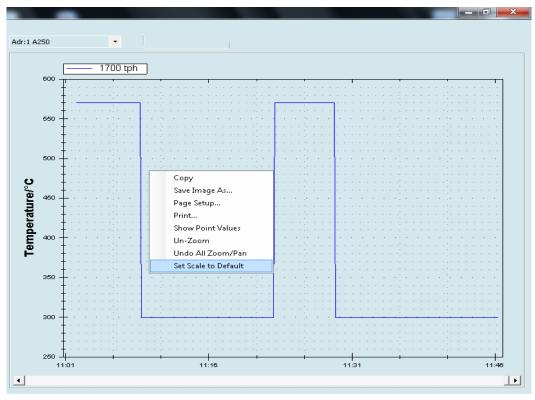




Calculate Spot Size

To calculate Spot Size click on *Utility* — Calculate Spot Size

This option is used to calculate the spot size at installed working distance of the Pyrometer. When you click on calculate spot size the new window will open.

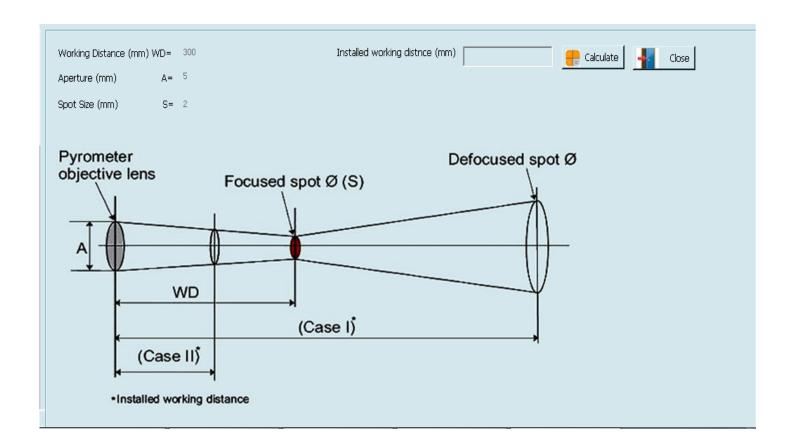

WD = Manufactured working distance in (mm).

A = It shows the value of lens opening (Aperture in mm)

S = Manufactured spot size of the pyrometer (mm)

User has to enter the value of WD, A, S, of the installed pyrometer (These values are given in section – 2.3). Now, putting the value of "Installed working distance" it will show the value of "Installed spot size".



Maintenance

In case of any queries, questions regarding repair, solutions to problems, calibration and assistance you may contact our sales representatives. Most of problems can be solved telephonically.

7.1 Cleaning Lens

The lens should be kept clean all the time as it aims at center of target object. When cleaning lens care should be taken and it can be done as follows:

- Firstly blow off lightly loose particles with "canned air" which is used for cleaning computer equipment or a small bellows squeeze (used for cleaning lenses).
- Now brush out gently remaining particles with a soft hair brush, a soft lens tissue can also be used.
- At last clean remaining particles "dirt" using a cotton or soft lens tissue dampened in distilled water. Do not scratch the surface.

In case of finger prints or any other grease material uses any of the following removing elements:

- Kodak lens cleaner
- Ethanol
- Denatured alcohol

Gently wipe with a soft, clean cloth after application of any of the above elements and wipe until you are able to see colours on the surface, then allow to air dry.

Do not wipe the surface dry, as this may result in scratches on the surface.

Note: Do not use any cleaners containing ammonia or simple ammonia to wash or clean the optical lens of pyrometer as this may permanently damage the surface of lens.



Serial communication protocol-MT500

This protocol is developed to use in the half duplex addressable communication mode. Master device should periodically issue requests to each Slave device. The request contains an address of polling "Slave" device. Slave device reply only on the requests issued by Master. Each Slave has its own address to recognize the issued request. AST sensors always operate as Slave devices. Using RS485 serial communication option allows connecting more than one sensor to Master device. AST sensors always perform delay of 5 ms before sending an answer on Master request to meet RS485 hardware requirement.

MT500_AST protocol uses only RD (Batch Read) and WD (Batch Write) commands. Sending other MT500 protocol commands causes sensor to consider it as error condition and answer with unknown command reply. Symbols enclosed within apostrophes ('symbol') means ASCII representation of the symbols. String enclosed with quotation mark ("string") means ASCII representation of the string (ended by '\0'). Data format is: <u>8 data bit</u>, <u>1 stop bit</u>, <u>No parity</u>, <u>baud-rate 19200</u>.

Description	Address	Items	Parameters
Emissivity	'0400'	'01'	Object emissivity multiplied by 1000. Refer user manual for adjustable range.
Emissivity slope	'0401'	'01'	Emissivity slope parameter multiplied by 1000. Refer user manual for adjustable range.
Response time (τ)	'0105'	'01'	Parameter specifies analog and serial output response time. See Table 1.
Upper basic range	'0100'	'01'	Upper measurement range limit in °K (read only)
Lower basic range	'0101'	'01'	Lower measurement range limit in °K (read only)
Analog output type	'0F01'	'01'	'0000': 4 to 20 mA (Default); '0001': 0 to 20 mA, '0002': 0 to 10 Volt; '0003': K type TC; '0004': J type TC
Upper sub range	'0102'	'01'	Upper analog scale value in °K
Lower sub range	'0103'	'01'	Lower analog scale value in °K
Station number	'0200'	'01'	Adjustable between '0001' to '0255'
Temperature unit	'0201'	'01'	Flag is used to instruct PC SW to show temperature
			'0000': Centigrade (Default); '0001': Fahrenheit
Switch off level	'0107'	'01'	Parameter multiplied by 10.
			Adjusted between 0 and 100%, Default set to 15%.
Sensor mode	'0204'	'01'	'0000' = Single color; '0001' = Two color
			This parameter is useless for single color sensors.
Internal temperature	'0006'	'01'	Temperature inside device case in °C (read only)
Head temperature	'0007'	'01'	Temperature inside optical head m°C(only for E –series pyrometers) (read only)
Clear time(tCL)	'0303'	'01'	Adjustable between 0 to 12, Default 0, 0=OFF, 1=Auto. 2-12 = 10msec to 25sec [refer to page-13(clear time)]
Laser control	'0F00'	'01'	'0000': LASER OFF; '0001': LASER ON (Default)
Communication type selection	'0F03'	'01'	'0000':RS-485;, '0001': RS-232 (Default)
Set point	'1700'	'01'	Set point for relay actuation (only for E –series pyrometers)
Hysteresis	'1800'	'01'	Hysteresis value relay actuation
LCD back light control	'1801'	'01'	'0000': BL OFF; '0001': BL ON(Default) (Only for E-series pyrometers)
Device name	'1D00'	'01'	10 Bytes "Hot end ", if less then 10 bytes pad with space at end.
Working distance (mm)	'1D01'	'01'	10 Bytes "1000 ", if less then 10 bytes pad with space at end.
Spot size-apperture (mm)	'1D02'	'01'	10 Bytes "1000-6000" if less then 10 bytes pad with space at end. '-' sign between spot size and apperture is compulsory
Relative energy (read only)	'0002'	'01'	Relative energy multiply by 1000 for 2 color pyrometers only



Device model number (read only)	'0E00'	'01'	10 bytes "AST450C "', if less than 10 byte pad with space at end
Firmware version	'1300'	'01'	Firmware version number of device (read only)
Sensor serial number (read	'1400'	'01'	6 bytes in hex, if less than 6 bytes pad with '0' at start. Only numbers
only)			allowed.
Device type (read only)	'1301'	'01'	'0001': Single color; '0002' : Two color
			'0003': Thermopile; '0004' : Reserved
Real temperature and status	'0000'	'02'	Calculated object temperature in °K and status of sensor (As shown in
code (read only)			Appendix A).
			First process status code then real temperature.

Batch Read (RD)command

Byte 1	Byte 1 Bytes 2,3 Byte		Bytes 6-9	Bytes 10, 11	Byte 12	Bytes 13, 14
1 Byte	2 Bytes	2 Bytes	4 Bytes	2 Bytes	1 Byte	2 Bytes
STX	Station ID	RD	Address	Items	ETX	Checksum

Byte 1: Always STX (0x02)

Bytes 2, 3: The Station Number of the device to read from (2 Hex digits)

Bytes 4, 5: The command to execute (RD)

Bytes 6-9: This is the starting address to read from. Must be 4 bytes long

Bytes 10, 11: This is the number of addresses to read. Must be 2 bytes long

Byte 12: Always ETX (0x03)

Bytes 13, 14: The checksum is the lowest 8 bits of the sum of bytes 2 through 12

Example: Read two parameters starting from address 0000, from the station number 10 (0AH). This will read addresses 0000 and 0001.

Byte 1	Bytes 2, 3	Bytes 4, 5	Bytes 6-9	Bytes 10, 11	Byte 12	Byte 13, 14
STX	0A	RD	0000	02	ETX	2E
0x02	0x30, 0x41	0x52, 0x44	0x30,0x30,0x30,0x30	0x30, 0x32	0x03	0x32, 0x43,

 $Check sum\ is\ calculated\ as\ the\ lowest\ 8\ bits\ of\ the\ sum\ of\ the\ Hex\ codes\ for\ bytes\ 2\ to\ 12.$

Reply:

The reply length is L = (N * 4) + 8, Where N = the number of requested Items.

If the command is successful, the reply length will be at least 12 bytes. It consists of the STX, followed by four bytes for each requested item, then the ETX and Checksum.

Byte	Bytes	Bytes	Bytes	Bytes	Byte	Byte
1	2, 3	4, 5	6-9	10-13	L-2	L-1, L
STX	Station	RD	Data 1	Data N	ETX	Checksum



Reply to above command if address '0000' contains value 1497 and address '0001' contains value 0000.

Byte 1	Bytes 2, 3	Bytes 4, 5	Bytes 6-9	Bytes 10-13	Byte 14-15
STX	0A	RD	059D	0000	9C
0x02	0x30, 0x41	0x52, 0x44	0x30,0x35,0x39,0x44	0x30, 0x30, 0x30, 0x30	0x39, 0x43

in the event of an error, the reply is

Byte 1	Byte 2, 3	Byte 4, 5	Byte 6
NAK	NAK 0A		01
0x15	0x15 0x30, 0x41		0x30, 0x31

Batch Write (WD) command

Byte	Bytes	Bytes	Bytes	Bytes	Bytes	Bytes	Byte	Byte
1	2, 3	4, 5	6-9	10, 11	12-15	(L-6) - (L-3)	L-2	L-1, L
STX	Station ID	WD	Address	No. of Items	Data 1	Data N	ETX	Checksum

Byte 1	Bytes 2, 3	Bytes 4, 5	Bytes 6-9	Bytes 10, 11	Bytes 12-15	Byte 16	Byte 17,18
STX	0A	WD	0400	01	03E8	ETX	74
0x02	0x30, 0x41	0x57, 0x44	0x30, 0x34, 0x30, 0x30	0x30, 0x31, 0x30, 0x30	0x30, 0x33, 0x45, 0x38	0x03	0x37, 0x34

Reply:

If the command is successful, the reply is

Byte 1	Byte 2, 3	Byte 4, 5
ACK	0A	'W', 'D'
0x06	0x30, 0x41	0x57, 0x44

In the event of an error, the reply is

Byte 1	Byte 2, 3	Byte 4, 5	Byte 6
NAK	0A	'W', 'D'	01
0x15	0x30, 0x41	0x57, 0x44	0x30, 0x31



Error Codes

Error Code	Description	Comments
'1'	Invalid check sum	See how to calculate a check sum
'2'	Unknown command	Protocol uses only RD (Batch Read) and WD (Batch
		Write) commands
'3'	Data length error	Number of items in WD (Batch Write) command doesn't match
		number of data bytes
'4'	ETX not found	ETX (0x03) not present in command
'5'	Illegal Address	number of items in a request is set to 0;
		memory segment number in a request is out of 0-25;
		Wrong command value, No data at requested address;
'6'	More items requested	More than 99 items were requested in command
'7'	Unsuccessful write	It informs Master that it should repeat WD command

Table 1

Tau (τ)	Analog Response Time, ms	Serial Response Time, ms
1	2	20
3	6	50
5	10	100
10	20	200
30	60	300
50	100	500
100	200	1000
300	600	2000
500	1000	3000
1000	2000	4000
3000	6000	5000
5000	10000	10000



Appendix A

DATA	Comments
Status code	'0000' : No error
	'0001' : Signal is lower than sensor sensitivity
	'0002' : Out of range due to T brightness minimum
	'0003' : Too low energy
	'0004' : Signal is higher than sensor sensitivity
	'0006' : Sharp brightness jump
	'0007' : Non stable object measurement
	'0011' : Internal temperature warning
	'0013' : Thermopile ambient temperature too low
	'0014' : Thermopile ambient temperature too high
	'0015' : Pyrometer in testing mode
	'0016' : Pilot light ON
	'0017' : Measurement below lower basic range
	'0018' : Measurement exceeds upper basic range
	'0019' : Pyrometer in warm up period

Broadcast Message:

WD (Batch Write) command with Station ID of 0 is considered as broadcast message. Sensors process this command regardless of their Station Number and do not issue replies.

It is useful when master issues a request to change the same parameters of more than one Slave devices.

For more information write us at, sales@astinfrared.com



Appendix B

Typical emissivity values for various materials available:

All the emissivity values shown in the table are only approximate, as it depends various parameters and it may affect the emissivity of a material. These parameters are as under:

- 1. Temperature
- 2. Thickness of material
- 3. Angle of measurement
- 4. Spectral range of measurement
- 5. Geometry
- 6. Surface quality (polished, rough, oxidized, sandblasted)
- 7. Transmission

Aluminum, polished Aluminum, rough surface Aluminum, strongly oxidized Asbestos board Asbestos fabric Asbestos paper Asbestos slate Brass, dull, tarnished Brick, common Brick, common Brick, glazed, rough Bronze, porous, rough Bronze, polished Cast iron, rough casting Cast iron, polished Cast iron, polished Chromium, polished Chromium, polished Copper, commercial burnished Copper, oxidized Copper, oxidized Copper, oxidized Copper, oxidized Constitute of the polished Cost iron, cough casting Copper, oxidized Copp	Material	Emissivity
Aluminum, rough surface Aluminum, strongly oxidized O.25 Asbestos board O.96 Asbestos fabric O.78 Asbestos paper O.94 Asbestos slate O.96 Brass, dull, tarnished O.22 Brass, polished O.85 Brick, common O.85 Brick, glazed, rough O.94 Bronze, porous, rough O.95 Bronze, polished O.10 Carbon, purified O.80 Cast iron, rough casting Cast iron, polished Chromium, polished O.10 Clay, fired O.91 Concrete O.54 Copper, polished, Copper, commercial burnished O.97 Copper, oxidized to black Electrical tape, black plastic D.93 Frozen soil Glass Frozen soil Gold, polished O.92 Iron, hot rolled Iron, sheet galvanized, burnished O.23 Iron, sheet, galvanized, oxidized O.28		
Aluminum, strongly oxidized Asbestos board Asbestos fabric Asbestos paper O.94 Asbestos slate Brass, dull, tarnished O.22 Brass, polished O.85 Brick, common O.85 Brick, glazed, rough O.94 Bronze, porous, rough Carbon, purified O.80 Cast iron, rough casting Cast iron, polished Chromium, polished Clay, fired Copper, commercial burnished Copper, oxidized Copper, oxidized Copper, oxidized Copper, soil Copper, commercial burnished Copper, commercial copper Copper, commercial copper Copper, commercial copper Copper, oxidized Copper Copper, oxidized Copper Coppe		
Asbestos board Asbestos fabric O.78 Asbestos paper O.94 Asbestos slate O.96 Brass, dull, tarnished O.22 Brass, polished O.33 Brick, common O.85 Brick, glazed, rough O.94 Bronze, porous, rough O.95 Bronze, polished O.30 Carbon, purified O.80 Cast iron, rough casting Cast iron, polished O.21 Charcoal, powdered O.96 Chromium, polished O.10 Clay, fired O.91 Concrete O.54 Copper, commercial burnished O.97 Copper, oxidized Copper, oxidized to black Electrical tape, black plastic Enamel ** O.90 Gold, polished O.92 Iron, hot rolled Iron, sheet galvanized, burnished O.23 Iron, sheet, galvanized, oxidized O.24 Iron, sheet galvanized, oxidized O.25 Iron, sheet, galvanized, oxidized O.28		
Asbestos paper 0.94 Asbestos slate 0.96 Brass, dull, tarnished 0.22 Brass, polished 0.03 Brick, common 0.85 Brick, glazed, rough 0.94 Bronze, porous, rough 0.55 Bronze, polished 0.10 Carbon, purified 0.80 Cast iron, rough casting 0.81 Cast iron, polished 0.21 Charcoal, powdered 0.96 Chromium, polished 0.10 Clay, fired 0.91 Concrete 0.54 Copper, polished, 0.01 Copper, commercial burnished 0.07 Copper, oxidized 0.65 Copper, oxidized 0.65 Copper, oxidized 0.95 Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.23 Iron, sheet galvanized, oxidized 0.28 Iron, sheet, galvanized, oxidized 0.28 Iron, sheet, galvanized, oxidized 0.28 Iron, sheet, galvanized, oxidized 0.28		0.96
Asbestos paper 0.94 Asbestos slate 0.96 Brass, dull, tarnished 0.22 Brass, polished 0.03 Brick, common 0.85 Brick, glazed, rough 0.94 Bronze, porous, rough 0.55 Bronze, polished 0.10 Carbon, purified 0.80 Cast iron, rough casting 0.81 Cast iron, polished 0.21 Charcoal, powdered 0.96 Chromium, polished 0.10 Clay, fired 0.91 Concrete 0.54 Copper, polished, 0.01 Copper, commercial burnished 0.07 Copper, oxidized 0.65 Copper, oxidized 0.65 Copper, oxidized 0.95 Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.23 Iron, sheet, galvanized, oxidized 0.28	Asbestos fabric	0.78
Asbestos slate Brass, dull, tarnished 0.22 Brass, polished 0.03 Brick, common 0.85 Brick, glazed, rough 0.94 Bronze, porous, rough 0.55 Bronze, polished 0.21 Carbon, purified 0.80 Cast iron, rough casting 0.81 Cast iron, polished 0.10 Clay, fired 0.96 Chromium, polished 0.10 Clay, fired 0.91 Concrete 0.54 Copper, polished, 0.01 Copper, commercial burnished 0.07 Copper, oxidized 0.65 Copper, oxidized to black Electrical tape, black plastic Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.02 Ice 0.97 Iron, hot rolled 10.03 Iron, sheet galvanized, burnished 0.28 Iron, sheet, galvanized, oxidized 0.28 Iron, sheet, galvanized, oxidized 0.28	Asbestos paper	
Brass, polished Brick, common Brick, glazed, rough Brick, refractory, rough Bronze, porous, rough Bronze, polished Carbon, purified Cast iron, rough casting Cast iron, polished Charcoal, powdered Chromium, polished Concrete Copper, polished, Copper, commercial burnished Copper, oxidized Copper, oxidized to black Electrical tape, black plastic Enamel ** Description Formica Frozen soil Glass Gold, polished Gold, polished Gold, polished Copper Iron, hot rolled Iron, sheet galvanized, oxidized O.28 Iron, sheet, galvanized, oxidized O.28 Iron, sheet, galvanized, oxidized O.28 Iron, sheet, galvanized, oxidized O.25 Insection O.25 O.25 O.25 O.26 O.27 O.27 O.27 O.27 O.27 O.27 O.27 O.27		
Brass, polished Brick, common Brick, glazed, rough Brick, refractory, rough Bronze, porous, rough Bronze, polished Carbon, purified Cast iron, rough casting Cast iron, polished Chromium, polished Chromium, polished Concrete Copper, polished, Copper, commercial burnished Copper, oxidized Copper, oxidized to black Electrical tape, black plastic Enamel ** Description Formica Glass Glass Glass Glass Glass Gold, polished D.02 Iron, hot rolled Iron, sheet galvanized, oxidized D.85 Brick, refractory, rough D.85 Brick, refractory, rough D.85 Bronze, polished D.80 Cast iron, rough D.80 Cast iron, polished D.81 Cast iron, polished D.91 Concrete D.94 Copper, oxidized D.95 Enamel ** D.90 Formica D.93 Frozen soil D.93 Glass D.92 Glass, frosted D.96 Gold, polished D.77 Iron, oxidized D.77 Iron, sheet galvanized, burnished D.23 Iron, sheet, galvanized, oxidized D.28		
Brick, common 0.85 Brick, glazed, rough 0.85 Brick, refractory, rough 0.94 Bronze, porous, rough 0.55 Bronze, polished 0.10 Carbon, purified 0.80 Cast iron, rough casting 0.81 Cast iron, polished 0.21 Charcoal, powdered 0.96 Chromium, polished 0.10 Clay, fired 0.91 Concrete 0.54 Copper, polished, 0.01 Copper, commercial burnished 0.07 Copper, oxidized 0.65 Copper, oxidized to black 0.88 Electrical tape, black plastic 0.95 Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.07 Iron, hot rolled 0.77 Iron, oxidized 0.74 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28		0.03
Brick, glazed, rough Brick, refractory, rough Bronze, porous, rough Bronze, polished O.10 Carbon, purified O.80 Cast iron, rough casting O.81 Cast iron, polished O.96 Chromium, polished O.10 Clay, fired O.91 Concrete O.54 Copper, polished, O.01 Copper, commercial burnished O.70 Copper, oxidized O.88 Electrical tape, black plastic Enamel ** O.90 Formica Frozen soil Glass Glass O.92 Glass, frosted Gold, polished O.77 Iron, hot rolled Iron, sheet galvanized, oxidized O.28 Iron, sheet, galvanized, oxidized O.25 Bronus O.94 Brick, refractory, rough O.94 O.80 O.80 O.81 O.81 O.82 O.83 O.83 O.93 O.93 O.93 O.93 O.93 O.93 O.93 O.9		0.85
Brick, refractory, rough Bronze, porous, rough Bronze, polished O.10 Carbon, purified O.80 Cast iron, rough casting O.81 Cast iron, polished O.21 Charcoal, powdered O.96 Chromium, polished O.10 Clay, fired O.91 Concrete O.54 Copper, polished, O.01 Copper, commercial burnished O.07 Copper, oxidized O.65 Copper, oxidized to black Electrical tape, black plastic Enamel ** O.90 Formica O.93 Frozen soil O.93 Glass, frosted O.92 Glass, frosted O.96 Gold, polished O.07 Iron, oxidized O.77 Iron, oxidized O.74 Iron, sheet galvanized, oxidized O.28 Iron, sheet, galvanized, oxidized O.28		0.85
Bronze, polished Carbon, purified Cast iron, rough casting Cast iron, polished Cast iron, polished Charcoal, powdered Chromium, polished Clay, fired Concrete Copper, polished, Copper, commercial burnished Copper, oxidized Copper, oxidized Copper, oxidized to black Electrical tape, black plastic Enamel ** Copper soil Glass Glass Glass Glass, frosted Gold, polished Copper Iron, hot rolled Copper Iron, sheet galvanized, oxidized Copper		0.94
Bronze, polished Carbon, purified Cast iron, rough casting Cast iron, polished Cast iron, polished Charcoal, powdered Chromium, polished Clay, fired Concrete Copper, polished, Copper, commercial burnished Copper, oxidized Copper, oxidized Copper, oxidized to black Electrical tape, black plastic Enamel ** Copper soil Glass Frozen soil Glass Glass Glass Gold, polished Copper Iron, hot rolled Copper C	Bronze, porous, rough	0.55
Carbon, purified 0.80 Cast iron, rough casting 0.81 Cast iron, polished 0.21 Charcoal, powdered 0.96 Chromium, polished 0.10 Clay, fired 0.91 Concrete 0.54 Copper, polished, 0.01 Copper, commercial burnished 0.07 Copper, oxidized 0.65 Copper, oxidized to black 0.88 Electrical tape, black plastic 0.95 Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.28 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28		0.10
Cast iron, polished Charcoal, powdered Chromium, polished Clay, fired Concrete Copper, polished, Copper, commercial burnished Copper, oxidized		0.80
Cast iron, polished Charcoal, powdered Chromium, polished O.10 Clay, fired Concrete O.54 Copper, polished, Copper, commercial burnished O.65 Copper, oxidized Copper, oxidized O.65 Copper, oxidized to black Electrical tape, black plastic Enamel ** O.90 Formica O.93 Frozen soil O.93 Glass Glass O.92 Glass, frosted Gold, polished O.02 Ice Iron, hot rolled Iron, sheet galvanized, burnished O.28 Iron, sheet, galvanized, oxidized O.20 Ice O.77 Iron, sheet, galvanized, oxidized O.28	Cast iron, rough casting	0.81
Chromium, polished Clay, fired 0.91 Concrete 0.54 Copper, polished, 0.01 Copper, commercial burnished 0.07 Copper, oxidized 0.65 Copper, oxidized to black Electrical tape, black plastic Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 1ron, sheet galvanized, burnished 0.28 Iron, sheet, galvanized, oxidized 0.28		0.21
Clay, fired 0.91 Concrete 0.54 Copper, polished, 0.01 Copper, commercial burnished 0.07 Copper, oxidized 0.65 Copper, oxidized to black 0.88 Electrical tape, black plastic 0.95 Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.28 Iron, sheet galvanized, oxidized 0.28	Charcoal, powdered	0.96
Concrete 0.54 Copper, polished, 0.01 Copper, commercial burnished 0.07 Copper, oxidized 0.65 Copper, oxidized to black 0.88 Electrical tape, black plastic 0.95 Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.23 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28	Chromium, polished	0.10
Copper, polished, Copper, commercial burnished Copper, oxidized Copper, oxidized Copper, oxidized to black Electrical tape, black plastic Enamel ** O.90 Formica O.93 Frozen soil O.93 Glass Glass O.92 Glass, frosted Gold, polished O.02 Ice Iron, hot rolled O.77 Iron, oxidized Iron, sheet galvanized, burnished Iron, sheet, galvanized, oxidized O.07	Clay, fired	0.91
Copper, commercial burnished Copper, oxidized Copper, oxidized to black Electrical tape, black plastic Enamel ** O.90 Formica Frozen soil Glass Glass Glod, polished Ice O.97 Iron, hot rolled Iron, sheet galvanized, burnished O.07 Copper, oxidized O.08 O.99 O.90	Concrete	0.54
Copper, commercial burnished Copper, oxidized Copper, oxidized to black Electrical tape, black plastic Enamel ** O.90 Formica Frozen soil Glass Glass Glod, polished Ice O.97 Iron, hot rolled Iron, sheet galvanized, burnished O.07 Copper, oxidized O.08 O.99 O.90	Copper, polished,	0.01
Copper, oxidized to black Electrical tape, black plastic Enamel ** O.90 Formica O.93 Frozen soil O.93 Glass Glass O.92 Glass, frosted O.96 Gold, polished O.02 Ice O.97 Iron, hot rolled O.77 Iron, oxidized Iron, sheet galvanized, burnished O.28 Iron, sheet, galvanized, oxidized O.28	Copper, commercial burnished	0.07
Electrical tape, black plastic 0.95 Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.74 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28	Copper, oxidized	0.65
Enamel ** 0.90 Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.74 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28	Copper, oxidized to black	0.88
Formica 0.93 Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.74 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28	Electrical tape, black plastic	0.95
Frozen soil 0.93 Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.74 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28	Enamel **	0.90
Glass 0.92 Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.74 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28	Formica	0.93
Glass, frosted 0.96 Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.74 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28	Frozen soil	0.93
Gold, polished 0.02 Ice 0.97 Iron, hot rolled 0.77 Iron, oxidized 0.74 Iron, sheet galvanized, burnished 0.23 Iron, sheet, galvanized, oxidized 0.28		
Ice0.97Iron, hot rolled0.77Iron, oxidized0.74Iron, sheet galvanized, burnished0.23Iron, sheet, galvanized, oxidized0.28		
Iron, hot rolled0.77Iron, oxidized0.74Iron, sheet galvanized, burnished0.23Iron, sheet, galvanized, oxidized0.28	Gold, polished	
Iron, oxidized0.74Iron, sheet galvanized, burnished0.23Iron, sheet, galvanized, oxidized0.28		0.97
Iron, sheet galvanized, burnished0.23Iron, sheet, galvanized, oxidized0.28		
Iron, sheet, galvanized, oxidized 0.28		
Iron, shiny, etched 0.16		
	Iron, shiny, etched	0.16


Material	Emissivity
Iron, wrought, polished	0.28
Lacquer, Bakelite	0.93
Lacquer, black, dull	0.97
Lacquer, black, shiny	0.87
Lacquer, white	0.87
Lampblack	0.96
Lead, gray	0.28
Lead, oxidized	0.63
Lead, red, powdered	0.93
Lead, shiny	0.08
Mercury, pure	0.10
Nickel, on cast iron	0.05
Nickel, pure polished	0.05
Paint, silver finish**	0.31
Paint, oil, average	0.94
Paper, black, shiny	0.90
Paper, black, dull	0.94
Paper, white	0.90
Platinum, pure, polished	0.08
Porcelain, glazed	0.92
Quartz	0.93
Rubber	0.93
Shellac, black, dull	0.91
Shellac, black, shiny	0.82
Snow	0.80
Steel, galvanized	0.28
Steel, oxidized strongly	0.88
Steel, rolled freshly	0.24
Steel, rough surface	0.96
Steel, rusty red	0.69
Steel, sheet, nickelplated	0.11
Steel, sheet, rolled	0.56
Tar paper	0.92
Tin, burnished	0.05
Tungsten	0.05
Water	0.98
Zinc, sheet	



Appendix C

Mechanical Drawings

1. Water Cooling Jacket

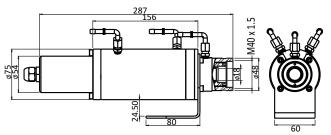


Water Cooling Jacket with Adjustable Flange PL (Reference no: 8000-02)

292


Water Cooling Jacket with Adjustable Flange TL (Reference no: 8000-06)

2. Air Purge Unit

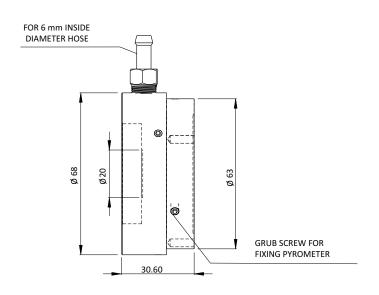


Air Purge Unit (Reference no: 8000-04)

3. Adjustable Mounting Stand

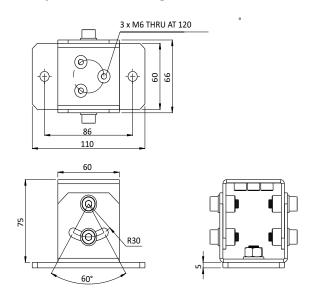

Adjustable Mounting Stand (Reference no: 8000-07)

3. Mounting Clamp

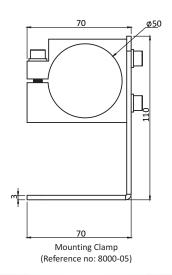



Information

Maintenance

The pyrometer has no internal parts, which have to be cleaned. The lens can be cleaned with compressed air, which is dry and free of oil. If the protection glass requires more thorough cleaning, use a soft, dry cloth such as that used to clean camera lenses.

Packing instructions

To transport or store the instrument, please use the original box or a box padded with sufficient shock absorbing material. For storage in humid areas or shipment overseas, the device should be placed in welded foil (ideally along with silicone gel) to protect it from humidity.

Warranty

AST AL30 instruments have a warranty of two years from the invoice date. This warranty covers manufacturing defects. User-induced faults are not covered under this warranty.

Software warranty

The windows compatible software was thoroughly tested on a wide range of windows operating systems. Nevertheless, there is always a possibility that windows or PC configuration or some other unforeseen condition exists that would cause the software not to run smoothly. The manufacturer assumes no responsibility or liability and will not guarantee the performance of the software. Liability regarding any direct or indirect damage caused by this software is excluded.

Limit of liability

AST not liable for any damages that arise from the use of any examples or processes mentioned in this manual.

Specifications are subject to change without notice

Copyright: © 2009, AST. All rights reserved.

This document may contain proprietary information and shall be respected as a proprietary document to AST with permission for review and usage given only to the rightful owner of the equipment with which this document is associated.

AST reserves the right to make changes, without further notice, to any products herein to improve reliability, function, or design. AST does not assume any liability arising out of the application or use of any product described herein, neither does it convey any license under its patent rights nor the rights of others.

Copyright: © 2009

ABOUT US

AST - Accurate Sensing Technologies

Accurate Sensing Technologies along with 3T - True Temperature Technologies established in 1994 focusing on the development and commercialization of non-contact temperature measurement technologies.

Based on these technologies, AST/3T has bought to the market a line of pyrometers for the remote measurement of target temperatures using no physical contact. AST/3T pyrometers use a totally new approach for remote temperature measurement achieving high accuracy.

The following products are available from AST/3T

- Single color pyrometer
- Ratio (2 color) pyrometer
- Fiber optics with single color and two color pyrometer
- Multi wavelength pyrometer specially for Aluminum & other Non ferrous application
- Black Body calibration sources
- Special system for automatic Isothermal Extrusion (MOMAS)
- Parameter setting Devices







www.astinfrared.com

AST - Accurate Sensors Technologies

Misgav Industrial Park,

Misgav 20174, Israel

Ph.: +972-4-9990025, Fax.: +972-4-9990031

E-mail: info@accuratesensors.com

AST - Accurate Sensing Technologies

188A, B-169 (Part), B-188 (A),

Road No. - 5, Mewar Industrial Area, Udaipur -

313003 (Rajasthan) INDIA

Phone: +91-9352506032

Email: sales@astinfrared.com